

重点 校对项

1. 版面尺寸

2. 材质标注

3. 物料编码

4. 颜色标注

5. 客户型号

6. 产品名称


7. 重量标注

8. 电压功率

A	项目					
	库					
	文件名					
B						
C						
D						
E						
F						
G						

技术要求（版本号：2016）

1. 印刷字体需清晰可见，文字不能粘到一起；
2. 颜色：四色；
3. 尺寸：145*210mm；
4. 装订方式：钉装。

 
					电磁炉			
					说明书		105g铜版纸 封面封底覆膜	
标记	处数	更改文件号	签字	日期	图样标记	重量	比例	 广东美的生活电器制造有限公司
制图	张奇慧	审核	卢灿飞		K	/	1:1	
设计	——	标准化	古广君					
校对	——	审定	古广君					
会签	——	日期	20210226	共 页		第 页		

CONDURA

OWNER'S
MANUAL



**INDUCTION
COOKER**

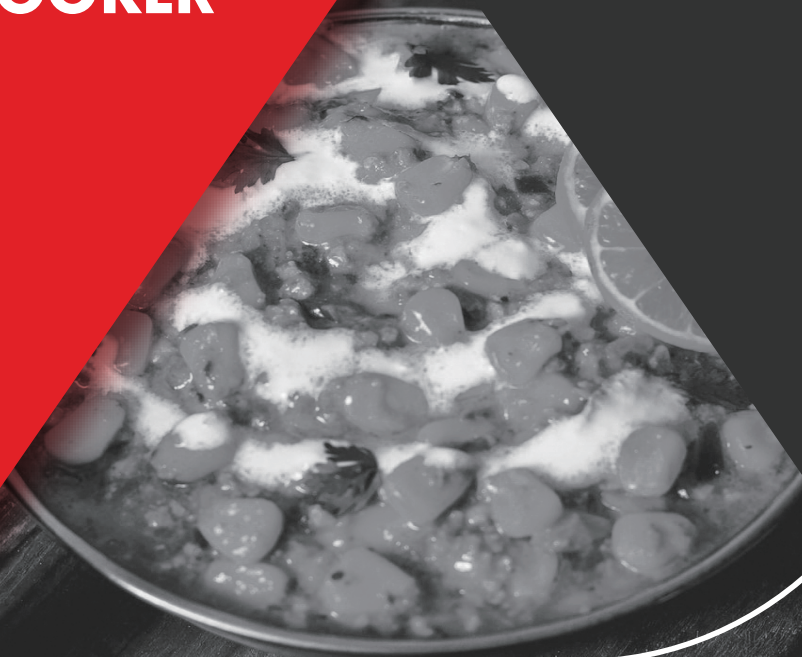

Thank you for purchasing the Condura Induction Cooker. Please read this manual thoroughly before using the product and keep it for future reference.

SAFETY NOTICE

1. Children should not play with this product. They should not be left unsupervised.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised and given proper instruction on the use of the appliance by a person responsible for their safety.
3. This appliance is intended for household use and similar small areas such as: staff kitchen pantry in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
4. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
5. Metal objects such as knife, fork, spoon and metal lid should not be placed on the surface of glass panel, as they may become hot.

I. SAFETY INSTRUCTIONS

 
For safety reasons and to avoid damage to the appliance or injuries to people, please follow all the safety instructions below. Ignoring safety warnings may result in injuries.

This appliance does not take into consideration the following situations:


- use by children or disabled people without supervision;
- children treating it as a toy.

⊘ Forbidden

- ⊘ Do not let children operate the appliance without supervision.

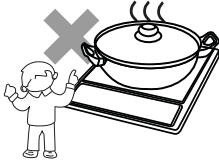

 
- ⊘ Do not heat empty pots. When in use, do not leave the appliance without supervision for a long time. When leaving the appliance without supervision, make sure there is enough water in the pot and set the temperature to low.

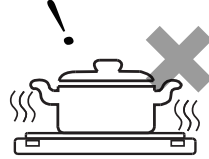

- ⊘ Never heat food in sealed containers, such as compressed products, cans, or coffee pots, to avoid explosion caused by heat expansion.



 
- ⊘ To avoid accidents, do not place the induction cooker, when in use, on a gas stove (the magnetic lines can heat the metal parts of the gas stove).

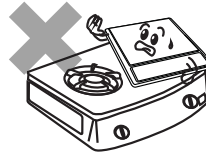


- ⊘ Do not directly rinse this induction cooker under water. Do not spill water or soup into the internal parts of the induction cooker.



 
- ⊘ To avoid danger, do not insert any foreign object, such as iron wire, nor block the air ventilation opening or air entry port of the unit.

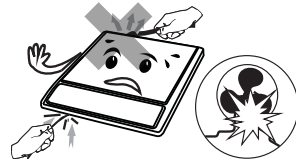

 ⊘ Do not heat iron items on the induction cooker heating plate to avoid danger caused by high temperatures.

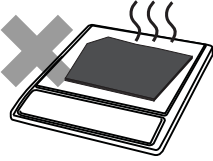

 ⊘ Use only the prescribed cooking utensils. These cooking utensils cannot be used on both induction cooker and gas stove.

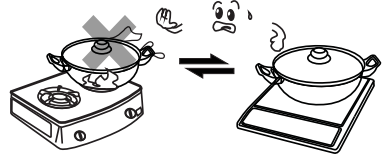

⊘ When using the induction cooker, do not put it on any metal platform (such as iron, stainless steel, aluminium), or place a non-metal pad less than 10cm thick on the heating plate.



 
⊘ To avoid danger, do not place paper, aluminium foil, cloth or other unsuitable articles onto the induction cooker heating plate for indirect heating.



⚠ Mandatory


⚠ Do not heat empty cookwares.

⚠ People with heart pacemakers should consult a doctor before using. First use the appliance to ensure that it does not affect the pacemaker.

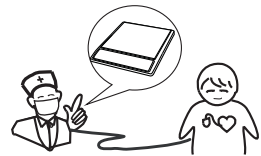

- ❗ This appliance is intended for household use and similar small areas such as:
- staff kitchen pantry in shops,
 - offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - Indoor use only.

 - ❗ When using the induction cooker, place it horizontally and allow at least 10cm of free space between the sides and back of the induction cooker and the wall. Do not use the induction cooker in narrow spaces. To allow the release of heat, do not cover the ventilation opening.

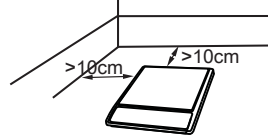


- ❗ To avoid damage, avoid causing impacts on the heating plate. **WARNING:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.




- ❗ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

 - ❗ To avoid danger, if the power cord is damaged, have it replaced by authorized personnel. Send an email to Contact Us Form found in the Concepstore website.

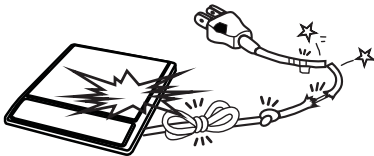

 - ❗ Unplug the power cord from the outlet after use to avoid fire and/or damaging the electronic components, caused by prolonged electrical connection.

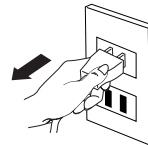

⚠ Warning

⚠ Use the knob to operate the unit.

⚠ Do not place heavy objects on the plate. This may damage the plastic cover and heating plate.



⚠ This is not a toy. Do not leave the product with children without supervision.

⚠ Always check that there are no object (glass, paper, etc) that could obstruct the inlet under your induction cooker.

⚠ Do not touch the heating plate with sharp tools to avoid cracking or damaging the plate. If there is a crack on the heating plate, turn off the unit to avoid any electrical shock that might occur.

 
⚠ Do not use the induction cooker near a gas or kerosene stove, gas cooker or in any space with an open fire. Use or stock in a cool place.



⚠ Attention

⚠ Metallic objects such as knives, forks, spoons and lids should not be placed on the hotplate since they can get hot.

⚠ When using the cooker, the heating plate will remain hot for a period of time. Do not touch it, be careful not to get burned.

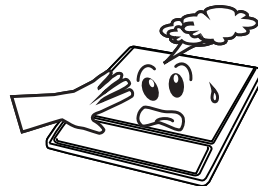


⚠ Do not use the induction cooker on top of a carpet, tablecloth or thin paper to avoid blocking the air inlet opening or air outlet opening, which may cause heat emission.



⚠ Always clean the induction cooker to prevent dirt from getting into the fan, which could affect the normal operation of the appliance.



 ⚠ When using the induction cooker or after use, please keep it clean. Protect the induction cooker from bugs, dust and humidity. Cockroaches and insects that go into the internal parts of the induction cooker may cause a short circuit of the electrical board. When not in use for a long period, please clean it and put it into a plastic bag to store it.

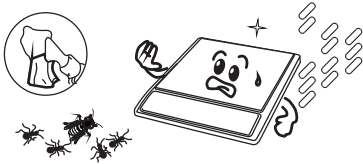

⚠ Please use a dedicated and high quality power outlet, with high power rating, equal to or above 13A. Do not share the power outlet with electrical appliances with high power ratings, such as air conditioners, electrical stoves etc to avoid fires caused by overburdening the outlet.



⚠ Check that there are no object (glass,paper,etc) that could obstruct the inlet under your induction cooker.

❗ Do not heat empty cookwares.

⚠ This is not a toy. Do not leave the product with children without supervision.

⚠ This appliance is not intended to be operated by means of an external timer or separate remote-control system

Symbols:

- ⊘ Forbidden
- ❗ Mandatory

- ⚠ Warning
- ⚠ Attention


II. PRODUCT INTRODUCTION

The induction cooker uses electromagnetic heating to cook high thermal efficiency. It is safe, reliable, and easy to clean.

Performance Parameters

Model	Applied Voltage/Frequency	Rated Power	Dimension (mm)	Weight (kg)
CONSD14.5IDCATMEC	230V ~ 60Hz 1 Ph	1600W	305 x 290 x 65	2.1

 Product Sketch Map

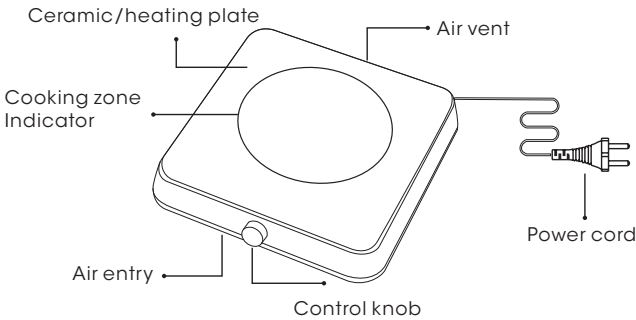

A. Before Using New Induction Cooker

- Read this guide, take special note of the "Safety Instructions" section.
- Remove any protective film that may still be on your ceramic plate.

B. Put the Pot on the Ceramic/Heating Plate

- Make sure the air vents are not blocked and keep utensils away from the immediate surrounding of the ceramic/heating plate.
- Make sure the cookware with food or liquid is placed in the center of ceramic/heating plate.

C. Control Knob has 5 temperature levels (Low, Low-Medium, Medium, Medium-High, High)

- ↻ Counter clockwise direction: decrease power setting
- ↻ Clockwise direction: increase power setting

III. OPERATION INSTRUCTIONS

Plug In

- After the power supply is connected, a beep will be heard. The LED will flash, indicating that the induction cooker is on standby mode.

Heating

- Turn the control knob clockwise, a beep will be heard and the LED will light. Set the power setting from low to high and the induction cooker starts heating.
- The default heating time is 2 hours. After 2 hours, the induction cooker will stop heating automatically, the LED will flash indicating that the induction cooker is back to standby mode.

Switch Off

- Turn the control knob counter clockwise, a beep will be heard and the induction cooker switches off.

IV. COMPATIBLE COOKWARE



Iron oil
frying pan



Stainless
steel pot



Iron pan



Iron kettle



Enamel stainless
steel kettle



Enamel
cooking utensil



Iron plate

- Requirement for pot materials: must have magnetic inducting materials.
- Shape requirement: flat bottom, with a diameter of more than 14.5 cm and less than 18 cm.
- After the first use, some white spots would appear at the bottom of the pot. This is normal.
- Please pour some vinegar into the pot, heat it at about 60-80°C, then wipe the spots away with brush.
- Incompatible pots material: glass, ceramic, aluminium, copper and other non magnetic material.
- If the pot is removed, the induction cooker will stop heating immediately. After the buzzer sounds for 1 minute, it will automatically go into standby mode.

V. CLEANING AND MAINTENANCE

- Before cleaning, please switch off the appliance first and then disconnect the power plug from the power outlet. Wait till the cooker plate of the induction cooker becomes cool before you start cleaning.
- After using the induction cooker for a long time, the opening of air inlet/air outlet will pile up with dust or other dirt, please wipe it with a soft dry cloth. Dust in the air inlet and outlet can be cleaned by using a soft brush or a mini vacuum cleaner.

Note: Please do not rinse it with water.

For oil spots on the cooker plate, wipe the cooker plate by using a soft moist cloth with a little tooth paste or mild detergent. And then use a soft moist cloth to wipe it until no stain remains.

When not using it for a long time, please disconnect the power plug from the power outlet and protect the induction cooker from any dust or bugs.

VI.TROUBLESHOOTING

Abnormalities	Key checking points and trouble shooting
After plugging in the power cord and pressing the "ON/STANDBY" key, the indicator and display do not light up.	<ul style="list-style-type: none">• Is the power plug properly connected?• Is the switch, power outlet, fuse or power cord damaged?
The "ON/STANDBY" indicator lights up and the display works normally, but heating does not start.	<ul style="list-style-type: none">• Is the pot material proper?• Is the appliance in a "Preset" working status?• For other causes, please send an email to the ConcepStore website.
Heating suddenly stops during the process.	<ul style="list-style-type: none">• Is the temperature of the oil too high when frying?• Is the temperature of the surroundings very high?• Is the air inlet or air outlet of the induction cooker blocked?• Is the default heating time of the induction cooker over?• The self-safety protection of the induction cooker starts, wait for several minutes and connect power to use it.

Emergency

While in use, if there are some abnormal incidents, please unplug immediately and disconnect power.

For any failure of the product, please send an email to the Contact Us Form found in the ConcepStore website.

Customer Care

We are committed to serve.

QUESTIONS ABOUT YOUR CONDURA INDUCTION COOKER:

Please feel free to email us thru our website:

<http://www.concepstore.com/>

Or visit us at condura.com.ph and click Book A Service



CONCEPCION DURABLES INCORPORATED
CUSTOMER SERVICE DEPARTMENT

308 Sen. Gil Puyat Avenue, Makati City

Trunk Line: (02) 8 863 5555

 
TOLL FREE: 1800 10 888 8888

**Mobile Nos.: 0917 536 3030 (Globe)
0947 996 2415 (Smart)**

PO BOX 211 COMMERCIAL CENTER

MAKATI CITY

BUSINESS REPLY!
Permit No. 2416A!
NO STAMP NEEDED



CONDURA

PRODUCT WARRANTY CERTIFICATE

IMPORTANT: PLEASE READ CAREFULLY

Concepcion Durables, Inc. ("CDI") warrants to the purchaser that this CONDURA INDUCTION COOKER will be free from defects in material and workmanship, and agrees to repair or replace any defective part or unit with a new or equivalent part or unit through any of its Authorized Service Centers if such defect is found to be manufacturer's error and in accordance with the terms of this warranty, subject to the following conditions:

1. COVERAGE OF WARRANTY

Applicable for Condura Induction Cooker

2. WARRANTY PERIOD (from the date of original purchase)

System Parts and labor.....1 Year

CDI warrants this Induction Cooker to the original purchaser/user to be free from defects in materials and workmanship under normal use.

CDI shall, at no cost to the original purchaser/user, repair or replace the unit or any of its parts that is found by CDI to be actually defective within the Warranty Period, with original or equivalent unit or parts, subject to the conditions and exclusions provided below.

3. LIMITATIONS

This warranty is not transferable, valid only in the Philippines. This warranty shall be void if the unit is:

- Improperly installed or mounted, or subjected to misuse, abuse, neglect, accident, alteration or abnormal voltage conditions
- Plugged into any device other than a suitable power supply outlet
- Serviced, opened, dismantled, disassembled, or reassembled by anyone other than a CDI accredited service center
- Damaged in transport or subjected to rough handling
- Damaged due to rodent, pest, or related infestation
- Damaged due to commercial use (stores, restaurants, other businesses, and non-household application)
- Damaged due to accidents, flood, fire, etc.

This warranty does not cover breakable parts and accessories, and any damages due to wear and tear.

The above warranties are given by CDI in lieu of any other warranties, express or implied. CDI and its vendors disclaim any implied warranty of merchantability or fitness for a particular purpose or any similar standard imposed by applicable legislation. CDI's responsibility to repair, replace or offer a refund for defective units, parts and related items is the sole and exclusive remedy provided for breach of these warranties.

MODEL NO. CONSD14.5IDCATMEC **SERIAL NO.**

NOTE: Keep this warranty card together with your Original Sales Invoice /Official Receipt as proof of purchase. If the date of purchase cannot be proven, warranty shall be based on CDI's Invoice to Dealer.



Fill out this warranty card completely and mail within 15 days from date of purchase. This will activate your warranty.

CONDURA

MODEL NO. CONSD14.5IDCATMEC **SERIAL NO.**

DEALER (Please indicate branch)

DATE OF PURCHASE **DEALER INVOICE NO.**

CUSTOMER NAME **EMAIL ADDRESS**

ADDRESS

TELEPHONE NO. **MOBILE NO.**



www.CONDURA.com