

Large Capacity ICE MAKER OWNER'S MANUAL



TABLE OF CONTENTS

Important Safeguards1	-2
Product Specifications	2
Parts	
Control Panel	.3
Before First Use	.4
Operating Instructions	5-6
Cleaning and Maintenance	6
Troubleshooting	.7

IMPORTANT SAFEGUARD

When using electrical appliances, basic safety precautions must be followed to reduce the risk of fire, electrical shock and injury to persons or properties.

Read all instructions before using your Condura Large Capacity Ice Maker.


- 1. Read and understand all instructions.
- 2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the appliance.
- 3. As protection against fire, electric shock and injury to persons, do not immerse cord or plug in water or any other liquid.
- 4. Do not let the cord hang over the edge of the table or countertop.
- Do not allow the cord to get in contact with hot surfaces, carpets or other heat insulators.
- Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been damaged in any manner. Contact Condura's customer service hotline for examination, repair or adjustment.
- 7. The use of accessories not recommended by the manufacturer may result in fire, electric shock or injury to persons.
- 8. This appliance must be earthed.
- 9. The use of extension cords for this appliance is not recommended.
- 10. Do not use the appliance outdoors.
- 11. Place the ice maker away from direct sunlight and ensure that there is at least 4 inches of space between the back of your unit and the wall. Minimum distance of other objects from each side of the ice maker should be at least 4 inches.
- 12. Do not place the appliance on or near a gas burner, electric burner or in a heated oven.
- 13. Do not use the appliance for any other use other than what it is intended for.
- 14. Do not use other liquid to make ice cubes other than clean water.
- 15. Unplug from power outlet when not in use and before cleaning.
- 16. The ice maker should always be kept on an upright position. Do not tip over.
- 17. To disconnect, switch off the appliance and remove the plug from the power outlet. Always pull by the plug. Do not pull the cord.
- 18. Do not clean the ice maker with flammable fluids. The fumes may create a fire hazard or risk of explosion.
- 19. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- 20. To reduce the risk of fire or electrical shock, do not disassemble the unit or attempt to repair the appliance yourself. There are no user serviceable parts inside. Repair should be done only by Condura's authorized service centers.
- 21. Close supervision is necessary when any appliance is used by or near children.
- 22. This appliance can be used by children ages 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instructions concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Children below 8 years of age shall be kept away from the appliance unless continuously supervised.

- 23. Children must not play with the appliance.
- 24. This appliance is intended to be used in household and similar applications such as:
 - a. staff kitchen areas in shops, offices and other working environments;
 - b. by clients in hotels, motels and other residential type environments;
 - c. farm houses:
 - d. bed and breakfast type environments.
- 25. WARNING: Risk of fire/flammable materials used. If you need to dispose of the appliance, please dispose according to local regulations regarding disposal of the appliance for its flammable blowing gas.
- 26. WARNING: Keep ventilation openings clear of obstruction.
- 27. WARNING: Do not damage the refrigerant circuit.
- 28. WARNING: Do not use mechanical devices or other means to accelerate the defrosting process or ice harvesting process other than those recommended by the manufacturer.
- 29. WARNING: Do not use other types of electrical appliances inside the ice maker.
- 30. Save these instructions for future reference.


PRODUCT SPECIFICATION

Model	CIM22D2SB0
Rated Voltage	230V~60Hz
Power Input	180W
Product Dimensions	357 x 423 x 452 mm
Product Weight	15 kg
Ice Making Capacity	22 kg/24 hrs
Ice Storage Capacity	2.2 kg
Refrigerant	R290

PARTS

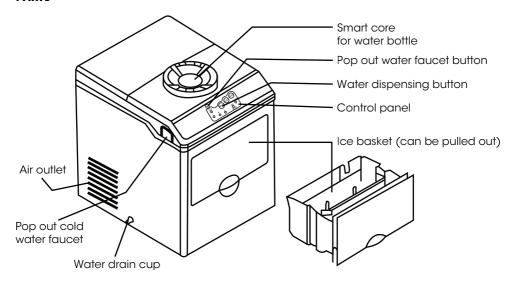


CONTROL PANEL

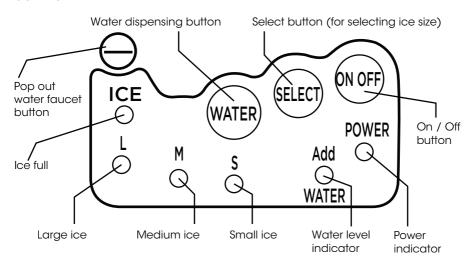

BEFORE FIRST USE

- 1. Remove the exterior and interior packaging.
- 2. Check if the ice scoop is included in the package. If there are any parts missing, please contact Condura's customer service hotline.
- 3. Clean the interior with lukewarm water and a soft cloth. Take out the ice basket and clean with soap and water.
- 4. Find a location for the ice maker that is away from direct sunlight and other heat sources (i.e. stove, furnace, radiator). Place the ice maker on a flat, even surface. Make sure that there is at least 4 inches of space around the ice maker.
- 5. Allow one hour for the refrigerant fluid to settle before plugging the appliance in.
- 6. The plug must be easily accessible.
- 7. Before placing the water bottle on the ice maker, make sure that the drain plug on the back of the unit is fastened tightly.
- 8. Hold the water bottle vertically and upside down (over the unit) and place the water bottle into the smart core for the water bottle.
- 9. Apply slight pressure in order to pierce the bottle cap.
- 10. You may use 2, 3 or 5 gallon water bottles with pierceable sealed caps.

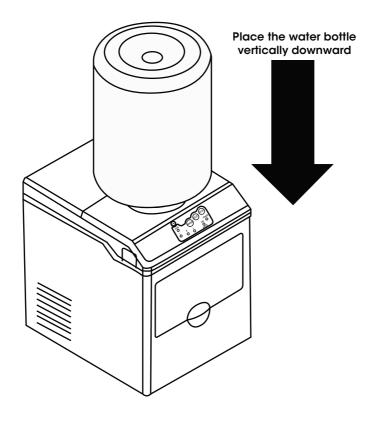


OPERATING INSTRUCTIONS

DANGER: Improper use of the grounded plug can result to a risk of electrical shock. If the power cord is damaged, please contact Condura's customer service hotline.

- The unit should be properly grounded for your safety. The power cord of this
 appliance is equipped with a three-prong plug which mates with standard
 three-prong wall outlets to minimize the possibility of electric shock.
- Plug your appliance into an exclusive, properly installed, grounded wall outlet.
 Do not, under any circumstances, cut or remove the third (ground) prong from the power cord.
- This appliance requires a 230V~60Hz electrical outlet with three-prong ground.

MAKING ICE


- 1. Press the "ON/OFF" button on the control panel to begin the ice making cycle.
- 2. Select the size of the ice bullets by pressing the "Select" button.
- 3. The ice making cycle lasts 6 to 15 minutes, depending on the size of the ice bullet selection and the ambient temperature.
- If the water pump can no longer pump water, the ice maker will stop automatically and the "ADD WATER" indicator will light up. Please replace the water bottle with a new and full water bottle.
- 5. Press the "ON/OFF" button to start the unit again. If the "ADD WATER" indicator is still on after replacing the bottle, please refer to the instructions below:
 - Check the water filter located at the bottom of the water tank for any obstruction or blockages. Remove blockages, if any.
 - Check the water filter connected to the pipe for any obstruction or blockages.
 To clean the water filter, release the clipper and remove the water pipe.
 Then you may take out the water filter, clean, install back and use the clipper to fasten the water pipe again.

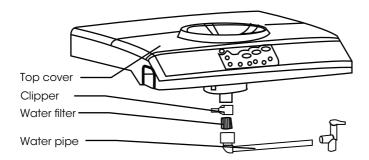

- Wait 3 minutes before restarting to allow the refrigerant to settle inside the compressor.
- 6. When the ice basket is full, the ice maker will automatically stop working and the "ICE" indicator on the control panel will be lit. Please empty the ice basket to resume ice production.

DISPENSING COLD WATER

- 1. The ice maker can dispense cold water after using for more than 30 minutes.
- 2. Press the water faucet button to pop out the cold water faucet.
- 3. Press and hold the "WATER" button to dispense cold water to your cup. Release once your cup is full.

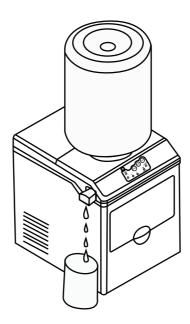

CLEANING AND MAINTENANCE

Caution: Unplug the appliance before cleaning. As protection against fire, electric shock and injury to persons, do not immerse cord or plug in water\ or any other liquid.

- 1. Remove the ice basket.
- 2. Clean the interior with diluted dishwashing soap, warm water and a soft cloth.
- 3. Rinse the interior with water and drain out the water by unplugging the drain cap on the side of the unit.
- The exterior part of the ice maker should be cleaned regularly with a soft, damp cloth.
- 5. Dry the interior and exterior with a soft cloth.
- 6. When not in use, remove the drain cap to completely drain water from the water tank.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
"WATER" indicator is on	Lack of water	Switch off the ice maker, replace the water bottle with a new bottle full of water and restart.
WATER Indicator is off	Water filter is blocked	Check the water filters for any blockage and clean if needed.
"ICE" indicator is on	The ice bucket is full	Empty the ice bucket.
Ice bullets stick together	The ice cycle is too long	Switch off the ice maker and restart when the ice bullets melt. Select the small ice function.
ice pullets stick together	The water temperature in the water tank is too low	Change the water in the inner tank. The water temperature must be between 8°C to 32°C.
Ice making cycle is normal,	Ambient temperature or water temperature in the water tank is too high	Please run the ice maker below 32°C and pour colder water into the tank.
but there is no ice production	Refrigerant fluid leakage	Please contact Condura's customer service hotline.
	Pipe in the cooling system is blocked	Please contact Condura's customer service hotline.

Customer Care

We are committed to serve.

QUESTIONS ABOUT YOUR CONDURA LARGE CAPACITY ICE MAKER

Please feel free to contact any of out customer care hotline*:

CUSTOMER SERVICE DEPARTMENT

GMA & LUZON Area

Address: 308 Sen. Gil Puyat Avenue, Makati City

Trunk Line: (02) 8 863 5555 TOLL FREE: 1800 10 888 8888

Mobile Number: +63 917 536 3030 (Globe) "SMS Only" +63 947 996 2415 (Smart) "SMS Only"

Covered Region/Areas: National Capital Region (NCR), Ilocos Region (Region 1), Cordillera Administrative

Region (CAR), Central Luzon (Region III), CALABARZON (Region IV-A), MIMAROPA except Romblon

(Region IV-B), Bicol Region except Masbate (Region V)

Èmail Address: customercare@condura.com

CEBU Regional Office

Address: Dr. A Esperanza Building, A.C Cortes Ave. Mandaue City

Telefax No: 032 328 1416 Mobile Number: +63 947 996 2416 +63 921 222 0942

TOLL FREE: 1800 10 888 8888 Covered Region/Area: Masbate, Central Visayas (Region VII), Eastern Visayas (Region VIII)

ILOILO Regional Office

Address: 109 Yulo Street, Brgy. Yulo-Arroyo, Iloilo City, Iloilo

Telefax No: 032 36 1121 Mobile Number: +63 947 996 2417 +63 999 925 5736

+03 999 925 5730 TOLL FREE: 1800 10 888 8888

Covered Region/Area: Romblon, Western Visayas (Region VI)

CAGAYAN DE ORO Regional Offce

Address: No. 102 CKY Center, Capistrano-Chavez Street, CDO City

Telefax No: 08822 721 905 Mobile Number: +63 947 996 2419 +63 939 253 5011

+63 939 253 501 TOLL FREE: 1800 10 888 8888

Covered Region/Area: Zamboanga Peninsula (Region IX), Northern Mindanao (Region X), Autonomous Region

in Muslim Mindanao (ARMM) except Maguindanao, Agusan Del Norte, Surigao del Norte

DAVAO Regional Offce

Address: 1C, Nand-Saling Building, Sobrecarey Street, Obrero, Davao City

Telefax No: 082 224 5040

Mobile Number: +63 947 996 2418 +63 922 294 1478 TOLL FREE: 1800 10 888 8888

Covered Region/Area: Davao Region (Region XI), SOCCSKSARGEN (Region XIII), Agusan Del Sur, Surigao del Sur,

Maguindanao

All contact information detailed above may change without prior notice.

CONCEPCION DURABLES INCORPORATED CUSTOMER SERVICE DEPARTMENT

308 Sen. Gil Puyat Avenue, Makati City
Trunk Line: (02) 8 863 5555
TOLL FREE: 1800 10 888 8888
Mobile Nos.: 0917 536 3030 (Globe)
0947 996 2415 (Smart)

PO BOX 211 COMMERCIAL CENTER
MAKATI CITY

BUSINESS REPLY! Permit No. 2416A!





PRODUCT WARRANTY CERTIFICATE

IMPORTANT: PLEASE READ CAREFULLY

Concepcion Durables, Inc. ("CDI") warrants to the purchaser that this CONDURA LARGE CAPACITY ICE MAKER will be free from defects in material and workmanship, and agrees to repair or replace any defective part or unit with a new or equivalent part or unit through any of its Authorized Service Centers if such defect is found to be manufacturer's error and in accordance with the terms of this warranty, subject to the following conditions:

1. COVERAGE OF WARRANTY

Applicable for CONDURA LARGE CAPACITY ICE MAKER

2. WARRANTY PERIOD (from the date of original purchase)

CDI warrants this LARGE CAPACITY ICE MAKER to the original purchaser/user to be free from defects in materials and workmanship under nomal use.

CDI shall, at no cost to the original purchaser/user, repair or replace the unit or any of its parts that is found by CDI to be actually defective within the Warranty Period, with original or equivalent unit or parts, subject to the conditions and exclusions provided below.

3. LIMITATIONS

This warranty is not transferable, valid only in the Philippines. This warranty shall be void if the unit is:

- · Improperly installed or mounted, or subjected to misuse, abuse, neglect, accident, alteration or abnormal voltage conditions
- · Plugged into any device other than a suitable power supply outlet
- · Serviced, opened, dismantled, disassembled, or reassembled by anyone other than a CDI accredited service center
- Damaged in transport or subjected to rough handling
- · Damaged due to rodent, pest, or related infestation
- Damaged due to commercial use (stores, restaurants, other businesses, and non-household application)
- · Damaged due to accidents, flood, fire, etc.

This warranty does not cover breakable parts and accessories, and any damages due to wear and tear

The above warranties are given by CDI in lieu of any other warranties, express or implied, CDI and its vendors disclaim any implied warranty of merchantability or fitness for a particular purpose or any similar standard imposed by applicable legislation. CDI's responsibility to repair, replace or offer a refund for defective units, parts and related items is the sole and exclusive remedy provided for breach of these warranties.

MODEL NO.	CIM22D2SB0	SERIAL NO	

NOTE: Keep this warranty card together with your Original Sales Invoice/Official Receipt as proof of purchase. If the date of purchase cannot be proven, warranty shall be based on CDI's Invoice to Dealer.

Fill out this warranty card completely and mail within 15 days from date of purchase. This will activate your warranty.



MODEL NO. CIM22D2SB0	SERIAL NO
DEALER (Please indicate branch)	
DATE OF PURCHASE	
CUSTOMER NAME	EMAIL ADDRESS
ADDRESS	
TELEPHONE NO.	MOBILE NO.



