



**CSM20M1B0**  
***MINI DONUT MAKER***  
**OWNER'S MANUAL**

**CONDURA**  

---

**IBA ANG PINOY**



# CONTENTS

---

SAFETY INSTRUCTIONS	1
PRODUCT SPECIFICATIONS	1
PARTS	2
GETTING STARTED	3
HOW TO USE	3
CLEANING & MAINTENANCE	4

# SAFETY INSTRUCTIONS

---

- This product is designed for household use only.
- This product is not for commercial use.
- This product is not for use along with external timers or separate remote-control systems.
- This product is not for outdoor use.
- Close supervision is necessary when the product is used by or near children. To ensure your children's safety, please keep all packaging materials (e.g., plastic bags, boxes, polystyrene) out of their reach.
- This product is not to be used by persons with reduced physical, sensory, mental capabilities, or lack of experience and knowledge, unless they are supervised by a person responsible for their safety.
- Do not leave the product unattended when in use.
- Do not touch hot surfaces while using the product to prevent the risk of injury or burns.
- To avoid any risk of electrical hazards, do not immerse the cord, plug, or the product itself in water or other liquids.
- The use of accessories not recommended or sold by ConcepStore or Condura may cause fire, electric hazards, or injury.
- When not in use, remove the plug from the power outlet.
- Keep the product away from heat sources, direct sunlight, liquid, and sharp edges.
- Hot steam can escape when opening the lid during use. It is best to wear oven mitts when the product is in use.

 
# PRODUCT SPECIFICATIONS

---


Product Name	Condura Mini Donut Maker
Model Number	CSM20M1B0
Voltage	230V~60Hz
Power Input	875 W
Product Size	262 x 118 x 206 mm.

# PARTS

---

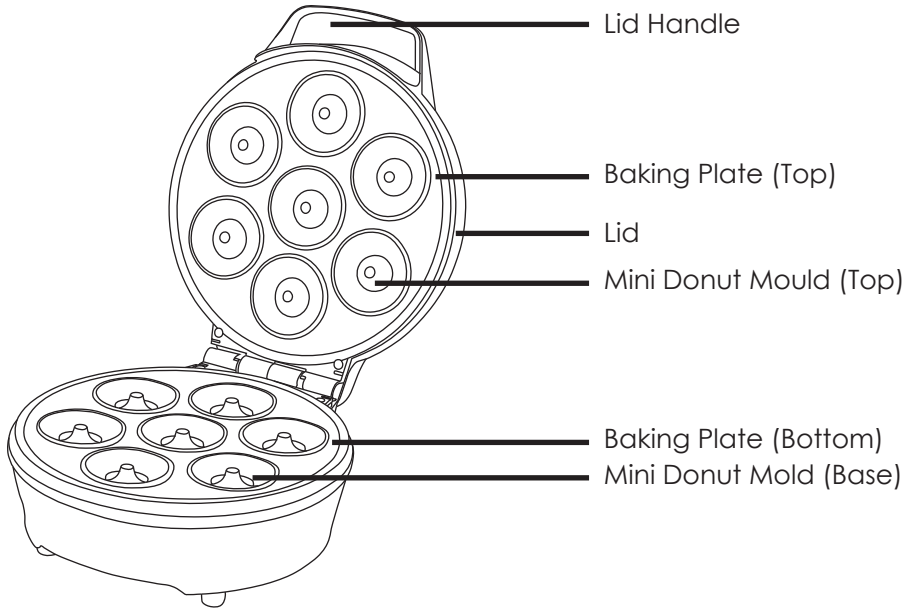

*Mini Donut Maker when opened*

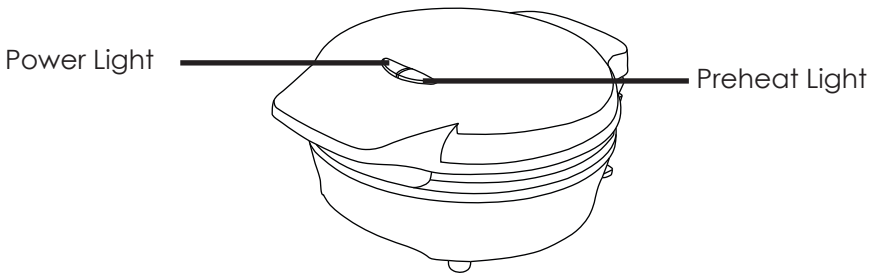 

*Mini Donut Maker when closed*

# GETTING STARTED

---

1. Use the lid handle to open the product.
2. Use a pastry brush, dip lightly with cooking oil, and brush it lightly on both top and bottom plates or spread it using an absorbent kitchen towel and wipe off any excess cooking oil.
3. Prepare the mini donut batters.

**NOTE:** When used for the first time, the product may emit slight smoke or odor, and it is normal will disappear after 1 or 2 uses, and it does not affect the product's safety. However, the flavor of the first mini donuts prepared may affect its flavor. It is recommended that the first mini donuts prepared must be discarded.

## HOW TO USE

---

1. Insert the plug into the power outlet. Both the Power Light and Preheat Light will turn on as the product begins preheating.
2. After approximately 3 minutes, the Preheat Light will turn off, which indicates that the unit is preheated and ready for use.
3. Fill the batter into the mini donut mold. Do not overfill since the batter will expand when baked.
4. Close the lid, and let the mini donuts bake for about 5 minutes.

**NOTE:** The Preheat Light will turn on and off during use, as the unit maintains the ideal cooking temperature, which prevents overheating.

5. To check the mini donut if it is perfectly cooked, insert a dry toothpick into the mini donut. If it comes out dry, then the mini donuts are ready. If necessary, close the lid and continue baking for at least 30 seconds until the mini donuts are golden brown in color and based on your preference.
6. Gently remove the baked mini donuts by using plastic or wood utensils.
7. Unplug the product from the power outlet and allow it to cool before cleaning.

# CLEANING & MAINTENANCE

---

- Unplug the product from the power outlet and allow it to cool before cleaning. Never immerse the product in water or any other liquid.
- Wipe the lid, base, and cooking plates with a damp cloth and a non-abrasive soap or dishwashing liquid.
- When done, wipe the product with a clean, soft, damp cloth and let it dry.
- Store the product in a clean, cool, and dry place.
- Never store the product while it is still hot or still plugged in.
- Never wrap the cord tightly around the product. Do not put any stress on cord where it enters inside the product, as this could cause breakage.
- Regularly check the product for damage. If you see damage on the appliance or the power cord, discontinue use and contact ConcepStore After Sales team.
- Do not repair the product by yourself. To avoid hazards, contact ConcepStore After Sales team. for repair/replacement.





# Customer Care

---

We are committed to serve.

## QUESTIONS ABOUT YOUR CONDURA MINI DONUT MAKER:

Please feel free to email us at  
[help@concepcion.com](mailto:help@concepcion.com)

You can also visit us at  
<http://www.concepcion.com>

Or visit us at [condura.com.ph](http://condura.com.ph)

 


**CONCEPCION DURABLES INCORPORATED**  
**CUSTOMER SERVICE DEPARTMENT**

308 Sen. Gil Puyat Avenue, Makati City  
Trunk Line: (02) 8 863 5555  
TOLL FREE: 1800 10 888 8888  
Mobile Nos.: 0917 536 3030 (Globe)  
0947 996 2415 (Smart)

**PO BOX 211 COMMERCIAL CENTER**  
**MAKATI CITY**

BUSINESS REPLY!  
Permit No. 2416A!  
**NO STAMP NEEDED**



# CONDURA

## PRODUCT WARRANTY CERTIFICATE

### IMPORTANT: PLEASE READ CAREFULLY

Concepcion Durables, Inc. ("CDI") warrants to the purchaser that this CONDURA MINI DONUT MAKER will be free from defects in material and workmanship, and agrees to repair or replace any defective part or unit with a new or equivalent part or unit through any of its Authorized Service Centers if such defect is found to be manufacturer's error and in accordance with the terms of this warranty, subject to the following conditions:

### 1. COVERAGE OF WARRANTY

Applicable for Condura Mini Donut Maker

### 2. WARRANTY PERIOD (from the date of original purchase)

**System Parts and labor..... 1 Year**

CDI warrants this Mini Donut Maker to the original purchaser/user to be free from defects in materials and workmanship under normal use.

CDI shall, at no cost to the original purchaser/user, repair or replace the unit or any of its parts that is found by CDI to be actually defective within the Warranty Period, with original or equivalent unit or parts, subject to the conditions and exclusions provided below.

### 3. LIMITATIONS

This warranty is not transferable, valid only in the Philippines. This warranty shall be void if the unit is:

- Improperly installed or mounted, or subjected to misuse, abuse, neglect, accident, alteration or abnormal voltage conditions
- Plugged into any device other than a suitable power supply outlet
- Serviced, opened, dismantled, disassembled, or reassembled by anyone other than a CDI accredited service center
- Damaged in transport or subjected to rough handling
- Damaged due to rodent, pest, or related infestation
- Damaged due to commercial use (stores, restaurants, other businesses, and non-household application)
- Damaged due to accidents, flood, fire, etc.

This warranty does not cover breakable parts and accessories, and any damages due to wear and tear.

The above warranties are given by CDI in lieu of any other warranties, express or implied. CDI and its vendors disclaim any implied warranty of merchantability or fitness for a particular purpose or any similar standard imposed by applicable legislation. CDI's responsibility to repair, replace or offer a refund for defective units, parts and related items is the sole and exclusive remedy provided for breach of these warranties.

**MODEL NO.** CSM20M1B0 ..... **SERIAL NO.** .....

NOTE: Keep this warranty card together with your Original Sales Invoice/Official Receipt as proof of purchase. If the date of purchase cannot be proven, warranty shall be based on CDI's Invoice to Dealer.



Fill out this warranty card completely and mail within 15 days from date of purchase. This will activate your warranty.

# CONDURA

**MODEL NO.** CSM20M1B0 ..... **SERIAL NO.** .....

**DEALER (Please indicate branch)** .....

**DATE OF PURCHASE** ..... **DEALER INVOICE NO.** .....

**CUSTOMER NAME** ..... **EMAIL ADDRESS** .....

**ADDRESS** .....

**TELEPHONE NO.** ..... **MOBILE NO.** .....



**CONDURA**

**IBA ANG PINOY**

**[www.condura.com](http://www.condura.com)**

