CONDURA

NO FROST SIDE BY SIDE INVERTER REFRIGERATOR

CSS170i



CONDURA

TABLE OF CONTENTS

SAFETY INFORMATION	. 2	- 3
PRODUCT PARTS IDENTIFICATION	. 4	
START UP OPERATION	5	
TEMPERATURE CONTROL SETTING GUIDE	6 -	- 7
FOOD STORAGE TIPS / DEFROSTING	8	
CLEANING, CARE AND MAINTENANCE	9	
TROUBLESHOOTING	10	
ENERGY SAVING TIPS	11	

 
SAFETY INFORMATION (DO's and DONT'S)

 
Before operating the refrigerator, please read the following information in the owner's manual thoroughly and keep it for your reference. Failure to observe these safety guidelines could result in fire, electric shock, injuries, or damage to your refrigerator and/or other properties.

 
CAUTION / WARNING:



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.







Do not use extension cord.

When positioning the appliance, ensure the supply cord is not trapped or damaged.

Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

This appliance is intended for household use and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments.
 - bed and breakfast type environments;
 - catering and similar non-retail applications

SAFETY INFORMATION (DO's and DONT'S)

A) POWER/SUPPLY CORD

- 1) Plug the unit properly into a wall outlet with its required voltage.
- 2) Please ensure a minimum clearance of 2" (inch) for air ventilation and to prevent damage to the supply cord.
- 3) When touching or cleaning the plug, make sure your hands and rug are dry.
- 4) Do not plug the refrigerator into a loose socket. There will be a risk of electric shock or fire.

B) STORAGE AND HANDLING

- 1) Storing hazardous materials, such as ether and benzyne, can cause explosions.
- 2) DO NOT store bottled drinks in the freezer.
- 3) DO NOT touch the freezer's inner wall with wet hands to avoid frost bites.
- 4) Avoid water contact in areas near the temperature control knob to prevent shock hazards.

C) DISPOSAL

Please contact local authorities in regard to the safe disposal of this product. Ensure that none of the pipes on the back of the product are damaged prior to disposal.

WARNING:

The refrigerant of this No Frost Top Mount Inverter cooling system contains R600a refrigerant.

The gas is flammable. Therefore, pay attention to not damaging the cooling system and piping during usage and transportation. In the event of damage, keep your product away from potential fire sources that may cause fire.

For Maintenance / Service:

Call Customer Hotline / Trunkline:

#88635555


Instructions for replacement of supply cord:

If the supply cord is damaged, it must be replaced by the manufacturer, authorized service personnel in order to avoid a hazard.

PRODUCT OVERVIEW

Parts and functions

Normal type

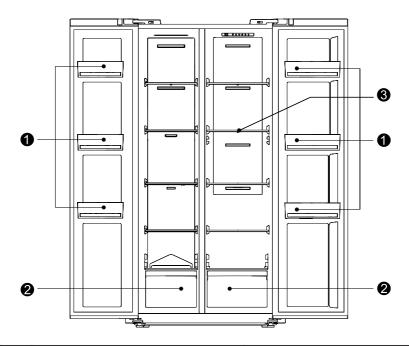

No	Parts Description	CSS170i	
1	Bottle Racks - Freezer / Fridge	3 pcs / 3 pcs	
2	Drawer - Freezer / Fridge	1 pc / 1 pc	
3	Tempered Shelf - Freezer / Fridge	5 pcs / 5 pcs	
1-	Egg Tray	1 pc / 6 eggs slot	
7-	Ice Twist Maker	YES	
Gross / Net Volume (Liters)		482 / 460	
Freezer / Fridge Volume (Liters)		189 / 271	
Unit Dimension WxDxH (mm)		835 x 635 x 1775	
Refrigerant		R600a	
Color Code		TITANIUM STEEL	
Voltage (V) Cycle (Hz)		220-240 / 60	
Defrosting System		Automatic / No Frost	

The actual design and location of accessories may vary depending on the model. Specifications and features are subject to change without prior notice.

START-UP OPERATION

Congratulations! and thank you for your purchase.

- Install the unit in a well-ventilated location.
- The start-up of the unit (compressor) will be after 3 minutes.
- Leave at least 2 inches of space between ref and wall and 12 inches of space between ref and ceiling or overhead cabinet.
- Upon delivery, let the motor oil settle down for 3-4 hours before plugging in the product.
- Plug the product directly to a wall outlet (220-240V) and set the temperature control knob to Setting No. 4.
- To compensate for floor unevenness, adjust clockwise or counterclockwise the leveler located on the lower front corners of your refrigerator. It is recommended that the unit be slightly tilted backward to allow defrosting water to flow inward during defrosting.
- For safety reasons, it is advisable to ground the unit by connecting the ground wire provided at the back of the unit.

! CAUTION / WARNING:

- Place refrigerator on a firm and flat surface.
- Do not place the product near direct sunlight or heat sources.
- Do not use extension cord.

LEVELLING FEET

The refrigerator should stand firm to avoid vibration.

If required, adjust the leveling feet to compensate for the uneven floor.


The front should be slightly higher than the rear to aid in door closing.

Leveling feet can be turned easily by tipping the cabinet slightly.

Turn the leveling feet counter clockwise to raise the unit, clockwise to lower it.

If the doors are not at the same height, the door can be adjusted with a spanner.

- A. Loosen locking nut counterclockwise.
- B. Rotate the adjusting nut counterclockwise to adjust the height of door.
- C. When the door is correctly aligned, tighten the locking nut clockwise.

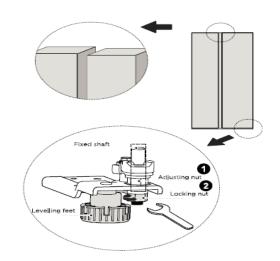


Operation Instructions 6

ΕN

OPERATION INSTRUCTIONS

Use and functions

 Functions



ATTENTION

The actual control panel may differ from model to model.

Display

When the power is on for the first time, full display shall last for 3 seconds, then enter into the normal operation display; (When the power is on for the first time, the setting temperature of refrigerator and freezer is 5°C/-18°C respectively)

When there is a fault, the fault code is displayed; when there is no fault, the setting range of the refrigeration compartment is displayed.

The display screen is on when the refrigerate door is open while the display screen is off when the freeze door is closed;

Key operation

After each key operation of temperature adjustment, the corresponding set temperature flashes for 3S:

In the refrigeration temperature setting mode, long press the setting key " ror 3S to switch to the freezing temperature setting mode;

In the freezing temperature setting mode, long press the setting key for " sector of the refrigeration temperature setting mode; " 3S to switch to the refrigeration temperature setting mode;

Locking and unlocking

The locking state shall be automatically entered after 30 seconds without key operation; No manual lock/unlock settings;

Temperature setting of refrigerating chamber

When setting the refrigerating temperature, the temperature will cycle in the following order each time the setting key is pressed. In the super cool state, LED4 and LED6 will light up at the same time .super cool exists for 6h, as shown below:



Operation Instructions

Temperature setting of freezing chamber

When setting the freezer temperature, the temperature will cycle in the following order each time the setting key is pressed.

In the super freeze state, LED1 and LED3 will light up at the same time, super freeze exists for 24 h. as shown below:



Recommended setting: refrigerating chamber 5°C, freezing chamber - 18°C.

Opening warning and alarm control

When the door is opened, the corresponding chamber lamp are on. There is no door opening prompt tone and door opening alarm.

Fault indication

The following warnings appearing on the display indicate corresponding faults of the refrigerator. Though the refrigerator may still have cold storage function with the following faults, the user shall contact a maintenance specialist for maintenance, so as to ensure optimized operation of the appliance.

Error code	Error Description
LED1, LED6 flash	Refrigerator temperature sensor fault
LED1, LED3 flash	Freezer temperature sensor fault
LED1, LED5 flash	Frozen defrosting sensor fault
LED1, LED4 flash	Ambient temperature fault




The quick-freezing function is designed to maintain the nutritional value of the food in the freezer. It can freeze the food in the shortest time. If a large amount of food is frozen at one time, it is recommended that the user turn on the quick-freezing function and put the food in. At this time, the freezing speed of the freezer compartment is increased, which can quickly freeze the food, effectively lock the nutrition of the food, and facilitate storage.

FOOD STORAGE TIPS

Keeping Food Fresh:

- Allow warm food or hot beverages to cool down to room temperature before storing them in your refrigerator. Put frozen food and beverage items in the fridge compartments to thaw.
- Do not keep the fridge or freezer door open for too long when storing or taking out food or beverage items.
- Wash and rinse fruits and vegetables to prolong their freshness. Dry before storing in the crisper pan.
- It is recommended to put leftover and smelly foods in sealed containers to prevent from spreading unnecessary odor inside the compartment.
- It is recommended to minimize the frequency of the door opening when storing large amount of food and beverages to help maintain the optimum cooling performance.
- Store fruits and vegetables inside the crisper to preserve its freshness and avoid excess

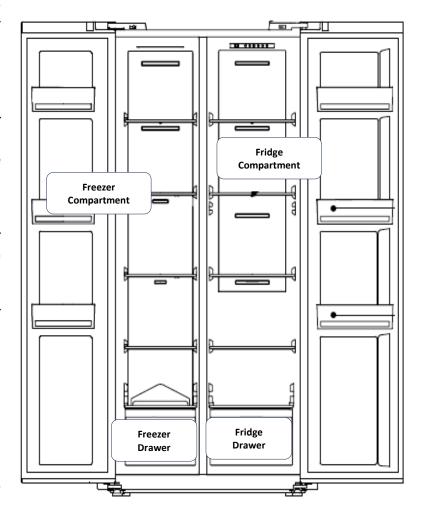

DEFROSTING

The Condura No Frost Inverter Refrigerator is designed to automatically defrost completely. Defrosted water from the evaporator will collect in the drain pan, where the accumulated water evaporates with the help of auxiliary tube.

WARNING:

Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.


CLEANING, CARE AND MAINTENANCE

Simple ways to make your refrigerator last (almost) a lifetime.

REFRIGERATOR CLEANING


Proper use of the No Frost Refrigerator Inverter ensures that it functions at an optimal level. It is important to regularly clean your fridge, or at least give it a wipe down, because of the build-up of mold and spillage from various perishable items kept in the fridge.

- UNPLUG No frost refrigerator. Remove all contents, including racks and shelves.
- CLEAN the racks, shelves, gasket, interior, and exterior of the refrigerator using a clean, damp cloth. Wipe it dry.
- PLUG your refrigerator directly into a 230V wall outlet.
- WIPE inside and outside of the refrigerator until it is clean and dry.

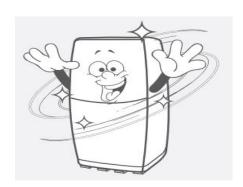

USING THE LEVELER

It is important to keep the refrigerator standing firm on a level surface to eliminate vibration and unnecessary noises during operation. Adjust the levelers found on both sides of the refrigerator to ensure its stability.

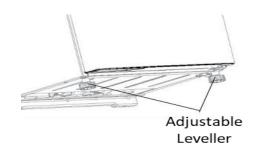

MOVABLE SHELVES

The walls of the refrigerator are equipped with a series of runners so that the shelves can be positioned as desired.



LED REPLACEMENT

It is recommended to have our authorized service personnel do the light replacement. Call our customer care hotlines for further assistance.



Only Authorized Service Personnel

WARNING - Do not use electrical appliances inside the food storage compartments, unless they are of the type recommended by the manufacturer.

NOTICE:

Refrigerator's surface may become warm during operation - this is NORMAL. This indicates that the internal condenser tube is pumping heat around the cabinet to prevent condensation/sweating on the surface of the cabinet.

TROUBLESHOOTING

Things to check before calling our customer service hotlines.

Caution! Before troubleshooting, disconnect the power supply. Only authorized service personnel must do the troubleshooting that is not in this manual.

PROBLEM	ACTION/S NEEDED
The refrigerator would not turn on or not working at all.	 Check that the power or supply cord is properly connected. Check the main fuse and electrical system of the house.
The fridge and freezer are not cooling enough.	 Check that the freezer and fridge doors are tightly closed. Check the storage of food and beverages; there must be enough space to allow air circulation. Check that the control knob is at the proper setting based on the amount of load. Check that the refrigerator is exposed directly to heat source.
The refrigerator cools too much	• Ensure that there is no air vent blockage inside the freezer. Adjust the freezer damper if necessary and also, check if temperature was set properly based on the stored amount of load.
The refrigerator emits a foul odor	 Check if there's no spoiled food or beverage inside the fridge. Make sure that the strong-smelling food items are properly sealed. There is no excessive accumulated defrost water in the drain pan. The refrigerator is thoroughly cleaned.
The refrigerator makes unusual noises.	 A refrigerator must be installed in a stable floor. Adjust the leveler. Move the appliance slightly if it's possible to touch the wall or other objects. Note that the noise may also come from the normal operation. Refrigerant passing through the system may cause sizzling sounds. On and Off Thermostat control operation may cause ticking sounds. The compressor can make a humming sound.

TROUBLESHOOTING

If the problem still occurs after checking all items, please call our Customer Care. Hotlines:

Trunkline: #88635555

Smart: +63 947 996 2415 (SMS Only)

*Numbers are subject to change without prior notice

Please prepare the following information to be relayed to the Customer Care Representative who will take your call:

- Customer ID No. (if already previously assigned one)
- Customer Name
- Address (House No., Block / Lot, Street, Subdivision, Barangay, City and nearest landmarks)
- Contact Nos. (Land line Nos. House & Office, Cellphone Nos.)
- Model & Serial No. of your refrigerator (found on the sticker inside ref)
- Dealer Branch (where the unit was purchased)
- Date of Purchase (according to sales invoice/receipt)
- Complaint or problem encountered.

You may also scan the provided QR code to book a service.



Scan QR code for service needs



Scan QR code for videochat with Condura

ENERGY SAVING TIPS

Earn more and Save more.

Kindly follow guidelines below on how to reduce energy consumption for more energy savings.

- Cool down hot food items first before placing them inside the refrigerator. It will
 increase the interior temperature, which may affect the freshness of the food
 while being stored inside the refrigerator.
- DO NOT keep the fridge and freezer doors open for too long to prevent hot air from entering to reduce the amount of wasted electricity.
- DO NOT block the cold air outlet with food items when the cold air does not spread into every corner of the compartments. It will result to a higher electricity consumption.
- Temperature must be set properly according to the amount of food and beverages.
- Defrost and clean refrigerator regularly.

Fill-up this warranty card	completely and mail	within 15 days from date of purchase. This will activate
your one (1) year warran	ty that is VALID FOR	HOUSEHOLD USE. Only from Condura!
MODEL NO.: DEALER:		SERIAL NO.:
		_ DEALER INVOICE:
		_ EMAIL ADDRESS:
ADDRESS:		
TELEPHONE NO.: :		_ MOBILE NO.:
I consent to the collect the purposes identified in deemed incorporated into	its Data Privacy Noti	ise by Concepcion Durables, Inc. (CDI) of the data above for ice published on its website (www.condura.com), which is
	CONE	JURA
	PRODUCT WARF	RANTY CERTIFICATE
IMPORTANT: PLEASE RE		acceptance that this CONDIDA refrigerator will be free from
		purchaser that this CONDURA refrigerator will be free from
		to repair, or at its discretion, replace any defective material with
		of its Authorized Service Centers, only if found to be
1. WARRANTY PERIOD (f		terms of this warranty, subject to the following conditions:
I. WARRANTI I ERIOD (I	Tom the date of origin	iai pui chase)
2 years	LED LAMP,	INVERTER BOARD & MAIN CONTROL BOARD
1 year	SYSTEM PA	ARTS & LABOR
	(Refrigerant	t, Filter Drier & Fin-Tube Assembly)
15 years	COMPRESS	OR
•		ly. Does NOT include Systems Parts and Labor)
No Warranty	•	RTS (Freezer Door, Ref Door & Gasket)
140 Warrancy		,
There will be corresponding	•	, Tempered glasses and Supply cord)
mere wiii be corresponding	g charges for labor and	d replacement parts after the warranty period.
2. COVERAGE OF WARR	ANTY	
The CONDURA No Frost In	nverter Warranty is app	olied to refrigerators used for household purposes only.
3. LIMITATIONS		
		the Philippines, and does not apply to damage(s) due to fire
		e (typhoon, flood, lightning, earthquake, etc.), use with voltage
		failure to follow operating instructions, provided in the manual, it
		ne unit has been tampered with, altered or in any way repaired uly authorized representative or Service Center, this warranty is
		nc. (CDI) offers this warranty as the only remedy available to the
		se within the warranty period. Correction of defects shall be
•		nd responsibilities of CDI to the original purchaser. In no even
		isequence that may arise as a result of using this CONDURA
product.	,	The state of the s
MODEL NUMBER		SERIAL NUMBER:
		r Original Sales Invoice / Official Receipt as proof of purchase. If shall be based on CDI's invoice to Dealer.


CONCEPCION DURABLES INC CUSTOMER SERVICE DEPARTMENT

Km. 20 East Service Road, Alabang, Muntinlupa

TRUNK LINE: #88635555

Mobile Nos.: 0947 996 2415 (Smart) "SMS Only"

BUSINESS REPLY PERMIT No. 2416A NO STAMP NEEDED

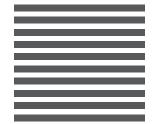





CUSTOMER SERVICE DEPARTMENT

GMA & LUZON AREA:

Address: Km. 20 East Service Road, Alabang, Muntinlupa

Trunk Line: #88635555

Mobile Number: +63 947 996 2415 (Smart) "SMS Only"

Covered Region/Areas: National Capital Region (NCR), Ilocos Region (Region I), Cordillera Administrative Region (CAR), Central Luzon (Region III), CALABARZON (Region IV-A), MIMAROPA

Except Romblon, Bicol

Email Address: customercare@condura.com

CEBU Regional Office:

Address: Esperanza Bldg., AC Cortes St., Ibabao, Mandaue City Cebu

Landline: 32 328 1416

Mobile Number: '+63 947 996 2416 and '+63 999 887 1657

Covered Region/Area: Masbate, Central Visayas (Region VII), Eastern Visayas (Region VIII)

ILOILO Regional Office:

Address: 277 Iznart St., Brgy Danao, City Proper, Iloilo City

Landline: 33 336 1121

Mobile Number: +63 947 996 2417 and +'+63 919 072 6530 **Covered Region/Areas:** Romblon, Western Visayas (Region VI)

CAGAYAN DE ORO Regional Office:

Address: 102 CKY Center, Capistrano St. corner Chaves St., Cagayan de Oro City

Landline: 88 881 0615 **Mobile Number:** +63 998 965 6756

Covered Region/Areas: Zamboanga Peninsula (Region IX), Northern Mindanao (Region X),

Autonomous Region in Muslim Mindanao (ARMM) except Maguindanao, Agusan del Norte, Surigao del

Norte

DAVAO Regional Office:

Address: 1C Nand Saling Bldg., Sobrecary St., Obrero, Davao City

Landline: 082 291 7276 **Mobile Number:** +63 998 965 6755

Covered Region/Area: Davao Region (Region XI), SOCCSKSARGEN (Region XII), Agusan del Sur,

Surigao del Sur, Maguindanao

CONDURA

www.condura.com