

CONDURA

NO FROST INVERTER BOTTOM FREEZER

CBF-312i



CONDURA
KAYANG-KAYA!



CONDURA HOME

**Products that let you experience the Condura brand offering, providing solutions to your home needs according to your chosen lifestyle.
(No Frost Prima, Maxima and Ultima Refrigerators, Personal Refrigerators)**



CONDURA HOME & BUSINESS

**Products that are made durable and efficient for business use, which are even better for home use.
(Negosyo Inverter PRO, Negosyo Inverter Style, Negosyo Style, No Frost Optima)**



CONDURA COMMERCIAL

**Products that come with Negosyo Features, so you can go about your business without worrying about performance and service.
(Upright Freezers, Chest Freezers, Beverage Coolers)**

Welcome

Thank you for choosing a Condura No Frost Inverter Refrigerator!

To familiarize yourself with all its features, please take some time to read the instructions in this booklet for the proper and safe use of your refrigerator.

Please keep this manual for reference and pass it on to any future owners

1 Safety Information

2 Overview

3 Safety

4 User Interface

5 Trouble Shooting

6 Product Warranty Certificate









Safety information

Please observe the following safety precautions in order to use safely and correctly the refrigerator and to prevent accident and danger during repair.

1. Be care of an electric shock. Disconnect power cord from wall outlet and wait for more than three minutes before replacing PCB parts. Shut off the power whenever replacing and repairing electric components.
2. When connecting power cord, please wait for more than five minutes after power cord was disconnected from the wall outlet.
3. Please check if the power plug is pressed down by the refrigerator against the wall. If the power plug was damaged, it may cause fire or electric shock.
4. If the wall outlet is over loaded, it may cause fire. Please use its own individual electrical outlet for the refrigerator.
5. Please make sure the outlet is properly earthed, particularly in wet or damp area.
6. Use standard electrical components when replacing them.
7. Make sure the hook is correctly engaged. Remove dust and foreign materials from the housing and connecting parts.
8. Do not fray, damage, machine, heavily bend, pull out or twist the power cord.
9. Please check the evidence of moisture intrusion in the electrical components. Replace the parts or mask it with insulation tapes if moisture intrusion was confirmed.
10. Do not let the customers repair, disassemble and reconstruct the refrigerator for themselves. It may cause accident, electric shock, or fire.
11. Do not store flammable materials such as ether, benzene, alcohol, chemicals, gas, or medicine in the refrigerator.
12. Do not put flower vase, cup, cosmetics, chemicals, etc., or container with full of water on the top of the refrigerator.
13. Do not put glass bottles with full of water into the freezer. The contents shall freeze and break the glass bottles.
14. When you scrap the refrigerator, please disconnect the door gasket first and scrap it.

Safety information

General safety

-  **WARNING!** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
-  **WARNING!** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
-  **WARNING!** Do not damage the refrigerant circuit.
-  **WARNING!** Do not use extension cord.
-  **WARNING!** Do not use other electrical appliances (such as ice cream makers) inside of refrigerating appliances, unless they are approved for this purpose by the manufacture.
-  **WARNING!** Do not touch the light bulb if it has been on for a long period of time because it could be very hot.¹⁾
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- The refrigerant isobutane (R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable.
- During transportation and installation of the appliance, be certain that none of the components of the refrigerant circuit become damaged.
 - avoid open flames and sources of ignition
 - thoroughly ventilate the room in which the appliance is situated
- It is dangerous to alter the specifications or modify this product in any way. Any damage to the cord may cause a short circuit, fire and/or electric shock.
- This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.
-  **WARNING!** Any electrical components(plug, power cord, compressor and etc.) must be replaced by a certified service agent or qualified service personnel.
-  **WARNING!** The light bulb supplied with this appliance is a “special use lamp bulb” usable only with the appliance supplied. This “special use lamp” is not usable for domestic lighting.¹⁾



Safety information


Installation

Important! For electrical connection carefully follow the instructions given in specific paragraphs.

- Unpack the appliance and check if there are damages on it. Do not connect the appliance if it is damaged. Report possible damages immediately to the place you bought it. In that case retain packing.
- It is advisable to wait at least four hours before connecting the appliance to allow the oil to flow back in the compressor.
- Adequate air circulation should be around the appliance, lacking this leads to overheating. To achieve sufficient ventilation follow the instructions relevant to installation.
- Wherever possible the spacers of the product should be against a wall to avoid touching or catching warm parts (compressor, condenser) to prevent possible burn.
- The appliance must not be located close to radiators or cookers.
- Make sure that the mains plug is accessible after the installation of the appliance.

Environment Protection

 This appliance does not contain gasses which could damage the ozone layer, in either its refrigerant circuit or insulation materials. The appliance shall not be discarded together with the urban refuse and rubbish. The insulation foam contains flammable gases: the appliance shall be disposed according to the appliance regulations to obtain from your local authorities. Avoid damaging the cooling unit, especially the heat exchanger. The materials used on this appliance marked by the symbol  are recyclable.

 The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Packaging materials


The materials with the symbol are recyclable. Dispose the packaging in a suitable collection containers to recycle it.

Disposal of the appliance

1. Disconnect the mains plug from the mains socket.
2. Cut off the mains cable and discard it.

Overview

Appearance and structure

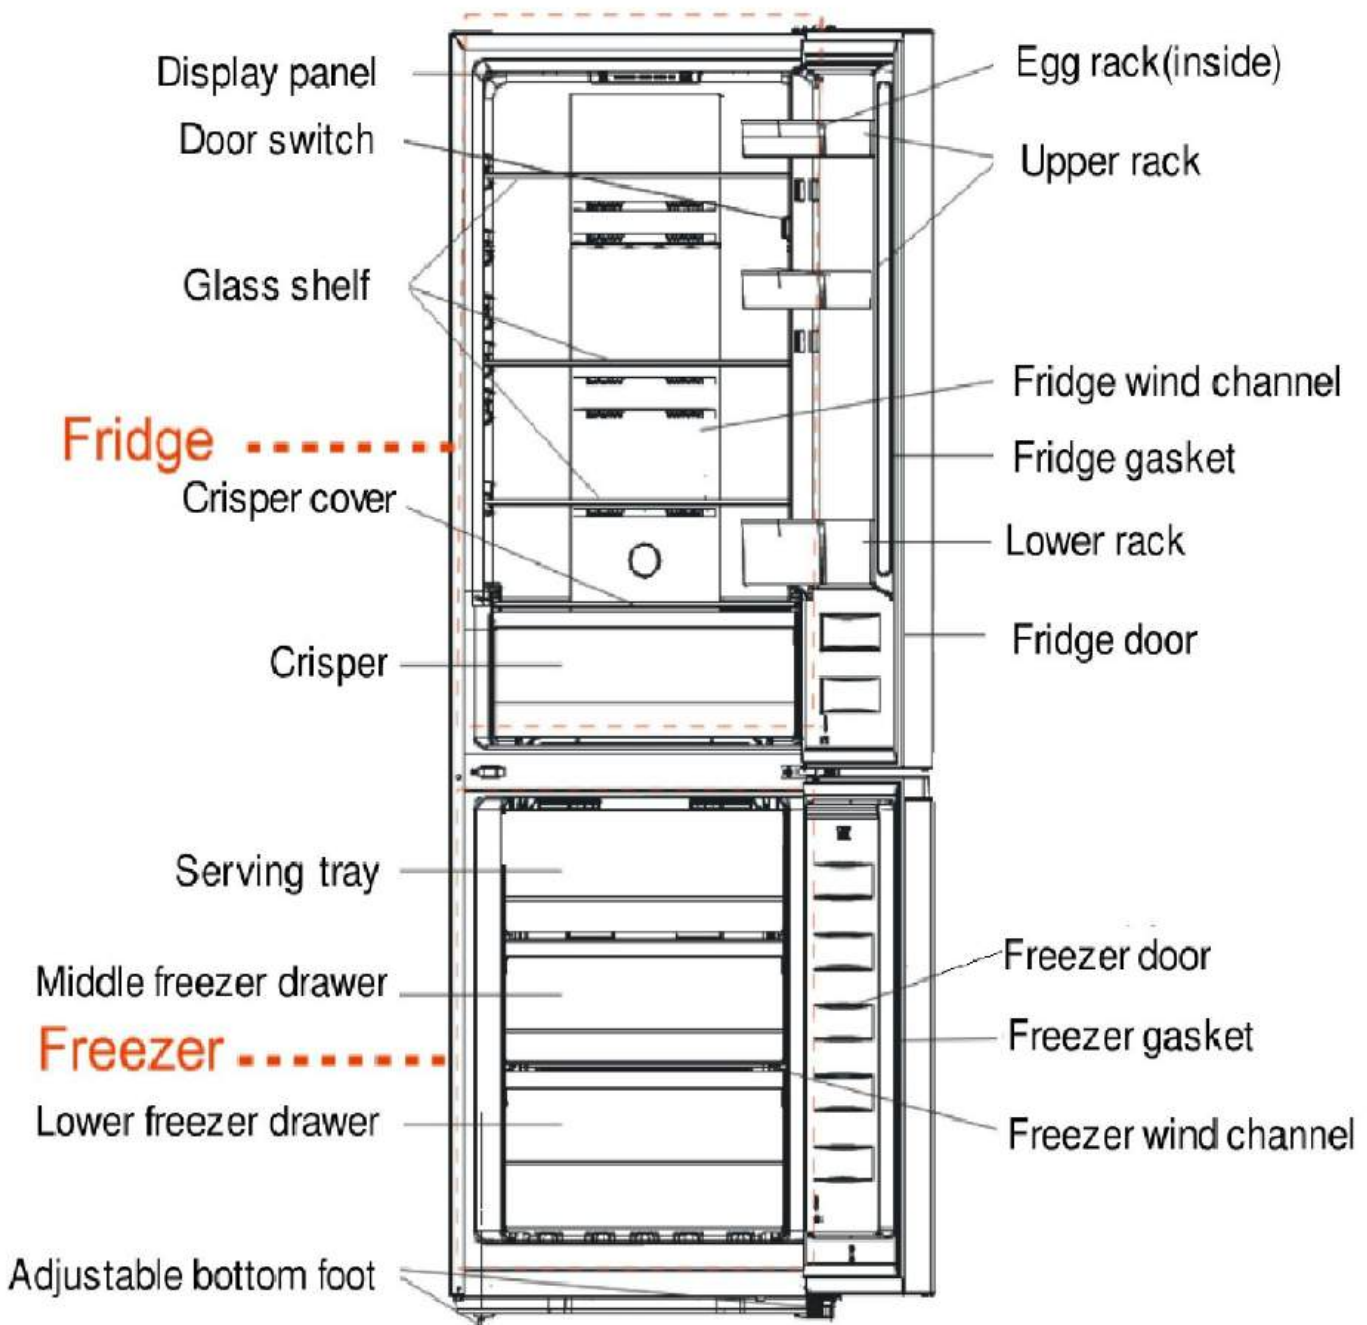

Note: Due to unceasing modification of our products, your refrigerator may be slightly different from this instruction manual, but its functions and using methods remain the same. To get more space in the freezer, you can remove drawers (except lower freezer drawer), ice tray.


Overview

Basic parameters

Content	Unit	Value
Voltage/frequency		230V~ / 60Hz
Gross capacity (fridge/freezer)	L	292(207/85)
Climate class(SN=10~32℃,N=16~32℃,ST=16~38℃,T=16~43℃)		T
Energy consumption / year	kWh/year	314
Energy consumption (EN153) per 24 h	kWh/24 h	0.86
Kind of coolant/Charge (134 /R600a) / grammes	R / g	R600a/30
Foaming components (R141b/C-P)	PU/	C-P
Certifications		/
Max noise level	dB(A)	41

Location

The appliance should be installed well away from sources of heat such as radiators, boilers, direct sunlight etc. Ensure that air can circulate freely around the back of the cabinet. To ensure best performance, if the appliance is positioned below an overhanging wall unit, the minimum distance between the top of the cabinet and the wall unit must be at least 100 mm. Ideally, however, the appliance should not be positioned below overhanging wall units. Accurate leveling is ensured by one or more adjustable feet at the base of the cabinet.

 **Warning!** It must be possible to disconnect the appliance from the mains power supply; the plug must therefore be easily accessible after installation.

Electrical connection


Before plugging in, ensure that the voltage and frequency shown on the rating plate correspond to your domestic power supply. The appliance must be earthed. The power supply cable plug is provided with a contact for this purpose. If the domestic power supply socket is not earthed, connect the appliance to a separate earth in compliance with current regulations, consulting a qualified electrician. The manufacturer declines all responsibility if the above safety precautions are not observed. This appliance complies with the E.E.C. Directives.

Start-up

1. Place refrigerator on a firm & flat surface; and away from direct sunlight & heat sources (like oven or stove).




2. Leave at least 2 inches of space between ref and wall; and 12 inches of space between ref and ceiling or overhead cabinet.

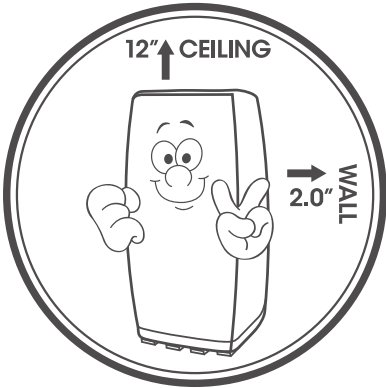


CAUTION or WARNING:
Install the unit in a well ventilated location.

3. For safety reason, it is advisable to ground the unit by connecting the ground wire provided at the back of the unit.
Do not connect the grounding wire to any gas pipes or phones lines.

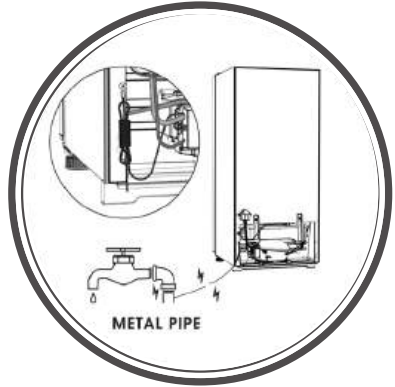

4. Let the motor oil settle down for 6 hours before plugging-in the refrigerator.
5. Plug the refrigerator directly to a wall outlet (230V).

Do not use extension cord.

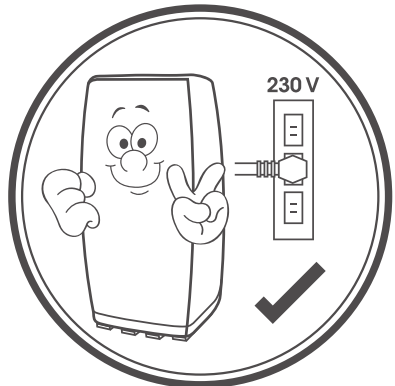

6. Allow the refrigerator to cool for 4 HOURS BEFORE LOADING FOOD & BEVERAGE ITEMS. Pre-cool with the temperature control knob set at: "4" settings.

User Interface

Operation and functions

Display panel

Use your appliance according to the following control regulations, your appliance has the corresponding functions as the control panels showed in the pictures below.



 
Controlling the temperature

We recommend that when you start your refrigerator for the first time, the temperature for the refrigerator is set to 4°C. If you want to change the temperature, follow the instructions below. **Caution!**

When you set a temperature, you set an average temperature for the whole refrigerator cabinet. Temperatures inside each compartment may vary from the temperature displayed on the panel, depending on how much food you store and where you place them. Ambient temperature may also affect the actual temperature inside the appliance.

1. Fridge

Press "°C" to set fridge temperature between 2°C and 8°C as needed, and display panel will display corresponding values according to the following sequence.

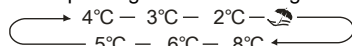

Note: When the "🌙" is lighted, the holiday mode is activated. Check the Holiday mode instruction.

2. Mode

You can select different modes according to your requirements by pressing the button "°C" on the display panel, and the corresponding icon will be illuminated.

Super Freeze(❄️)

Super Freeze will quickly lower the temperature within the freezer so food will freeze faster. This can lock in the vitamins and nutrients of fresh food and keep food fresh longer.

- You can press "°C" display panel inside door)for 3 sec to get into super freezer mode.
- When Super freeze Mode is selected, the light will be illuminated and the freezer temperature will be set at -24°C. • In case of the maximum amount of food to be frozen, please wait about 24h.
- Super freeze automatically switches off after about 52 hours and then the freezer temperature setting will revert back to the previous setting.

3. Holiday(🌙)

If you are going to be away for a long period of time, press "°C" you can activate this function.

When Holiday Mode is activated, the light will be illuminated. The freezer temperature will be set at -18°C and the fridge temperature will be set at 15°C.

Important! Do not store any food in the fridge during this time.

4. Switch(🔌)

You can switch on or switch off your appliance by press this button.

Press "🔌" 3 seconds, after a buzzer sound, the appliance will be turned off.

Press "🔌" 1 seconds, after a buzzer sound, the appliance will be turned on.

Troubleshooting

Common problem and checking

If you experience a problem with your appliance or are concerned that the appliance is not functioning correctly, you can carry out some easy checks before calling for service, please see below.

Warning! Don't try to repair the appliance yourself. If the problem persists after you have made the checks mentioned below, contact a qualified electrician, authorized service engineer or the shop where you purchased the product.

Problem	Possible cause & Solution
Appliance is not working correctly	Check whether the power cord is plugged into the power outlet properly.
	Check the fuse or circuit of your power supply, replace if necessary.
	It is normal that the freezer is not operating during the defrost cycle, or for a short time after the appliance is switched on to protect the compressor.
Odours from the compartments	The interior may need to be cleaned
	Some food, containers or wrapping cause odours.
Noise from the appliance	The sounds below are quite normal: <ul style="list-style-type: none"> •Compressor running noises. •Air movement noise from the small fan motor in the freezer compartment or other compartments. •Gurgling sound similar to water boiling. •Popping noise during automatic defrosting. •Clicking noise before the compressor starts.
	Other unusual noises are due to the reasons below and may need you to check and take action: <ul style="list-style-type: none"> •The cabinet is not level. •The back of appliance touches the wall. •Bottles or containers fallen or rolling.
The motor runs continuously	It is normal to frequently hear the sound of the motor, it will need to run more when in following circumstances: <ul style="list-style-type: none"> •Temperature setting is colder than necessary •Large quantity of warm food has recently been stored within the appliance. •The temperature outside the appliance is too high. •Doors are kept open too long or too often. •After your installing the appliance or it has been switched off for a long time.

Troubleshooting

Common problem and checking

If you experience a problem with your appliance or are concerned that the appliance is not functioning correctly, you can carry out some easy checks before calling for service, please see below.

Warning! Don't try to repair the appliance yourself. If the problem persists after you have made the checks mentioned below, contact a qualified electrician, authorized service engineer or the shop where you purchased the product.

Problem	Possible cause & Solution
A layer of frost occurs in the compartment	Ensure food is placed within the appliance to allow sufficient ventilation. Ensure that door is fully closed. To remove the frost, please refer to cleaning care chapter.
Temperature inside is too warm	You may have left the doors open too long or too frequently; or the doors are kept open by some obstacle; or the appliance is located with insufficient clearance at the sides, back and top
Temperature inside is too cold	Increase the temperature by following the "Operation" chapter.
Doors can't be closed easily	Check whether the top of the refrigerator is tilted back by 10-15mm to allow the doors to self close, or if something inside is preventing the doors from closing.
Water drips on the floor	The water pan (located at the rear bottom of the cabinet) may not be properly leveled, or the draining spout (located underneath the top of the compressor depot) may not be properly positioned to direct water into this pan, or the water spout is blocked. You may need to pull the refrigerator away from the wall to check the pan and spout.
The light is not working	<ul style="list-style-type: none"> •The LED light may be damaged. Refer to replace lights in cleaning and care chapter.
Water dispenser is not functioning	<ul style="list-style-type: none"> •Is the water storage box installed accurately? Make sure there is enough water in the water storage box. •Is water line broke or bent? Make sure the water line is unblocked and clear of any obstruction. •Is the water storage box frozen for the refrigerator temperature is too low? Try selecting a warmer setting on the display panel.

If problem still occurs after checking all items above, please call our " Customer

Care Hotlines" :

Trunkline : **02 8 863 5555**

TOLL FREE : **1800 10 888 8888**

Globe: +63 917 536 3030

Smart: +63 947 996 2415

***Numbers are subject to change without prior notice**

Please prepare the following information to be relayed to the Customer Care Representative who will take your call:

- Customer ID No (if already previously assigned one)
 - Customer Name
 - Address (House No., Block / Lot, Street, Subdivision, Barangay, City and Nearest Landmarks)
 - Model & Serial No of your refrigerator (found on the sticker inside ref)- Dealer Branch (where the unit was purchased)
 - Date of purchase (according to sales invoice / receipt)
 - Complaint or problem encounter
- You may also scan the provided QR code to book a service**



Scan QR code for service needs

CONDURA

PRODUCT WARRANTY CERTIFICATE

IMPORTANT: PLEASE READ CAREFULLY

Concepcion Durables, Inc. (CDI) warrants the purchaser that this **CONDURA NO FROST INVERTER REFRIGERATOR** will be free from defective material and workmanship and agrees to repair or, at its discretion, replace any defective material with a new or equivalent part through any of its Authorised Service Centers only if found to be manufacturer's defect and in accordance with the terms of this warranty, subject to the following conditions:

1. COVERAGE OF WARRANTY

The Condura No Frost Inverter Warranty is applied to Refrigerators used for household purposes only.

2. WARRANTY PERIOD (from the date of original purchase)

CONDURA	WARRANTY
1 year.....	INVERTER BOARD SYSTEM PARTS & LABOR (Refrigerant, Filter Drier, Fan Motor, & LED Lamp)
10 years.....	COMPRESSOR (Motor only, EXCLUDES system parts & labor)
NO WARRANTY	Glass Shelves, Crisper Glass Cover, Power Cord, Plastic Parts (bottle racks, crisper pan & rubber gasket)

There will be corresponding charges for labor and replacement parts after the warranty period.

3. LIMITATIONS

This warranty is not transferable, valid only in the Philippines, and does not apply to damage(s) due to fire, improper use or punctured, force majeure (typhoon, flood, lightning, earthquake, etc.), use with voltage beyond the allowable range of 198V to 242V, or failure to follow operating instructions provided in the manual. If the serial number is removed or defaced, or if the unit has been tampered with, altered or in any way repaired, serviced, or worked on by anyone other than a duly authorized representative or Service Center, this warranty is considered null and void. CDI offers this warranty as the only remedy available to the original purchaser for any defect that may arise within the warranty period. Correction of defects shall be considered as complete fulfillment of liabilities and responsibilities of CDI to the original purchaser. In no event shall CDI be held responsible for any damage or consequence that may arise as a result of using this Condura product.

MODEL NO. SERIAL NO.

NOTE: Keep this warranty card together with your Original Sales Invoice/Official Receipt as proof of purchase. If the date of purchase cannot be proven, warranty shall be based on CDI's Invoice to Dealer.



Fill out this warranty card completely and mail within 15 days from date of purchase. This will activate your warranty.

CONDURA

MODEL NO. SERIAL NO.

DEALER (Please indicate branch)

DATE OF PURCHASE DEALER INVOICE NO.

CUSTOMER NAME EMAIL ADDRESS

ADDRESS

TELEPHONE NO. MOBILE NO.

I consent to the collection, processing and use by Concepcion Durables, Inc. (CDI) of the data above for the purposes identified in its Data Privacy Notice published in its website (www.condura.com), which is deemed incorporated into this Warranty Card.

Customer Care

We are committed to serve.

CONCEPCION DURABLES INCORPORATED

Trunk Line 02 8 863 5555
Globe 0917 536 3030
Smart 0947 996 2415

CUSTOMER SERVICE DEPARTMENT

GMA & LUZON Area

Address: 308 Sen. Gil Puyat Avenue, Makati City
Trunk Line: 02 8 863 5555
TOLL FREE: 1800 10 888 8888
Mobile Number: +63 917 536 3030 (Globe) "SMS Only"
+63 947 996 2415 (Smart) "SMS Only"

Covered Region/Area: National Capital Region (NCR), Ilocos Region (Region I), Cordillera Administrative Region (CAR), Central Luzon (Region III), CALABARZON (Region IV-A), MIMAROPA except Romblon (Region IV-B), Bicol Region except Masbate (Region V)
Email Address: customercare@condura.com

CEBU Regional Office

Address: Dr. A Esperanza Building, A.C Cortes Ave. Mandaue City
Telefax No: 032 328 1416 / 032 347 3380
Mobile Number: +63 947 996 2416
+63 921 222 0942
TOLL FREE: 1800 10 888 8888

Covered Region/Area: Masbate, Central Visayas (Region VII), Eastern Visayas (Region VIII)

ILOILO Regional Office

Address: 109 Yulo Street, Brgy. Yulo-Arroyo, Iloilo City, Iloilo
Telefax No: 033 336 1121
Mobile Number: +63 947 996 2417
+63 999 925 5736
TOLL FREE: 1800 10 888 8888

Covered Region/Area: Romblon, Western Visayas (Region VI)

CAGAYAN DE ORO Regional Office

Address: No. 102 CKY Center, Capistrano-Chavez Street, CDO City
Telefax No: 088 881 0615
Mobile Number: +63 947 996 2419
+63 939 253 5011
TOLL FREE: 1800 10 888 8888

Covered Region/Area: Zamboanga Peninsula (Region IX), Northern Mindanao (Region X), Autonomous Region in Muslim Mindanao (ARMM) except Maguindanao, Agusan del Norte, Surigao del Norte

DAVAO Regional Office

Address: 1C, Nand-Saling Building, Sobrecarey Street, Obrero, Davao City
Telefax No: 082 291 7278
Mobile Number: +63 947 996 2418
+63 922 294 1478
TOLL FREE: 1800 10 888 8888

Covered Region/Area: Davao Region (Region XII), SOCCSKSARGEN (Region XIII), Agusan del Sur, Surigao del Sur, Maguindanao

*All contact information detailed above may change without prior notice.




CONCEPCION DURABLES INCORPORATED CUSTOMER SERVICE DEPARTMENT

308 Sen. Gil Puyat Avenue, Makati City
Trunk Line 02 8 863 5555
Globe 0917 536 3030
Smart 0947 996 2415

PO BOX 211 COMMERCIAL CENTER
MAKATI CITY

BUSINESS REPLY !
Permit No. 2416A!
NO STAMP NEEDED

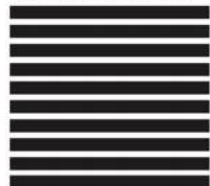



CONCEPCION DURABLES INCORPORATED
www.facebook.com/ConduraPhilippines

CONDURA
KAYANG-KAYA!

www.condura.com