


CONDURA


OWNER'S
MANUAL

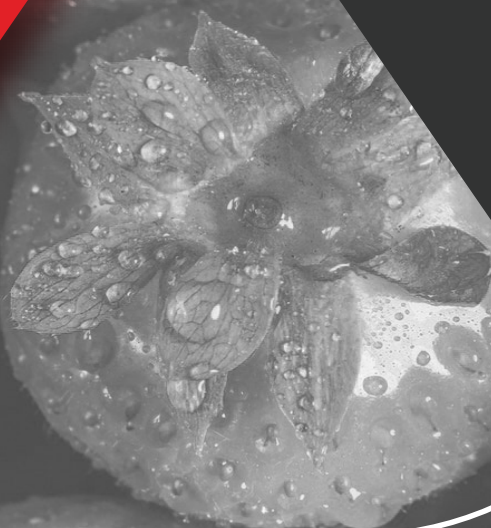

MULTIFUNCTIONAL
STERILIZER



PARTS

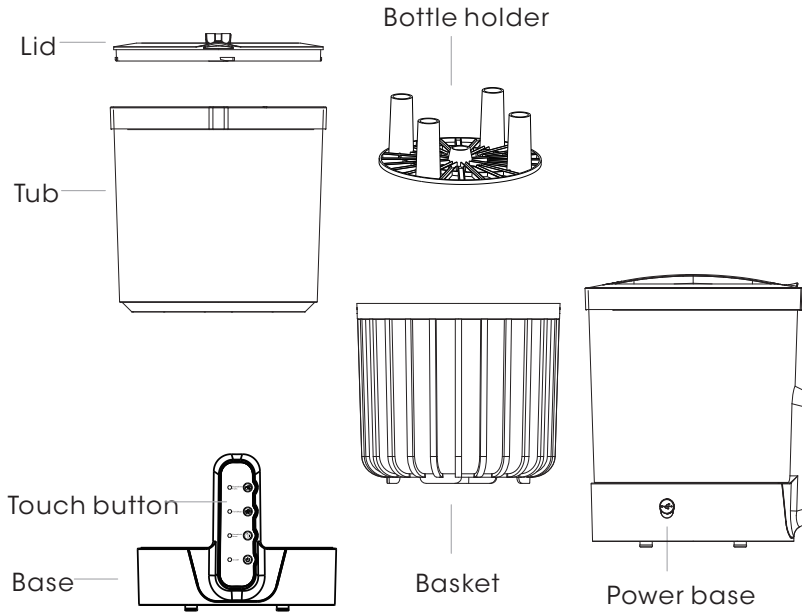

WATER CATALYST STERILIZATION

The water catalyst sterilization technology is a new technology that can disinfect and sterilize things in a short period of time through hydroxyl ions, which has strong oxidizing property and are generated from water electrolysis. Water catalysts can be made easily and sterilize quickly. They can become ordinary water completely through self redox reaction in a few minutes, and can be widely used for soaking, cleaning, disinfection and sterilization in families, hospitals, restaurants, food processing plants and livestock farms.

Sterilization diagram



Hydroxyl groups act on lipoproteins in the outer layers of bacterial cells and lipopolysaccharides in the inner layers of those cells.



They have double chain reaction with lipids on the cell walls of bacteria.




They penetrate the cell walls of bacteria and alter the permeability of bacteria.




The metabolic process of bacteria is destroyed, resulting in their death.


Detoxification diagram

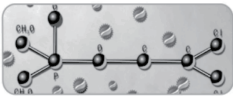

The components of compounds like pesticides and hormones are covalently bonded so that their chemical reactions come into play.

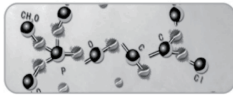

Hydroxyl functional groups break the covalent bonds of compounds like pesticides and hormones to degrade and deactivate them.

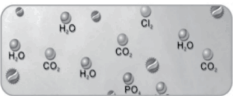

Compounds like pesticides and hormones thoroughly degrade into water, carbon dioxide, and inorganic salt, which are harmless to people and the environment.

Hydroxyl (-OH) is the core of water catalytic technology, and it is a kind of vital active oxygen. In term of molecular formula, it equals to hydroxyl (OH⁻) losing an electron. Thanks to its strong oxidation ability, Hydroxyl, an oxidant second only to fluorine in nature, can have chain reaction quickly with most organic pollutants, degrade harmful substances into harmless substances such as water, carbon dioxide and inorganic salt, causing no secondary pollution.

ATTENTION



1. Do not use non-standard power adapters to avoid product damage or safety hazards.




2. Please keep the product away from high temperature and fire.



3. Please do not disassemble or repair the product by yourself to avoid damage.



4. Please do not directly wash or soak in water to avoid parts failure caused by water seepage.

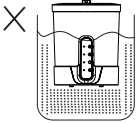

5. The body of the product should not be soaked in water. If water is poured on accidentally, wipe it to avoid malfunction caused by water seepage.

6. Items that need to be sterilized should be immersed in water completely.
7. Applicable kinds of water and water temperature:
 - * tap water
 - * ultrafiltration water
 - * mineral waterPure water should not be used, and the water temperature should not exceed 50 °C. If the temperature is too high, it is likely to damage the machine.
8. If its tub is lifted when the machine is working, its buzzer will ring twice and it will stop working automatically.
9. If there is no water in the tub, the buzzer will ring twice after 10 seconds and the machine stop working automatically.
10. When using the machine for several times in a row, please use it at an interval of about 10 minutes each time.
11. If sundries drop into the machine, please clean it up immediately.

12. If the machine will not be used for a long period of time, please ensure that it is thoroughly dry and store in a dry, ventilated place.
13. Before cleaning, maintaining and carrying the machine, switch off the power supply and remove the power plug.
14. Children or disabled persons should not use the machine.
15. Do not put your hands in the machine when it is working.
16. Please do not sterilize metals such as gold, silver, copper, stainless steel and iron, because these metals will be oxidized and the machine will be damaged at the same time.
17. Please do not use alcohol, detergents or other products that contain mercury or are alkaline to clean the machine.

OPERATION GUIDE

1. Open the lid and put things like vegetables, fruits, fish, meat and baby items that need to be sterilized into the basket.
 - 1.1 Vegetables, fruits, fish, meat and baby items should be sterilized separately. Please do not sterilize different kinds of things together.
 - 1.2 If there is too much dirt on vegetables, please shake it off before putting vegetables into the basket to make sterilization easier.
 - 1.3 Separate the leaves of lettuce and spinach, in an effort to get them better sterilized.
 - 1.4 Cut long vegetables such as celery into sections before disinfecting it.
 - 1.5 Wash the greasy dirt on tableware away before disinfecting them.
 - 1.6 Wash the dirt in milk bottles and water cups and turn them upside down on the bottle holder before disinfecting them.
2. Add water into the tub until items in it are fully immersed and cover the tub with the lid.

3. Switch on the power (after the power is switched on, the buzzer will ring twice and all lights on the panel will be off).
4. Touch the start button and the machine will enter standby state. Then touch the corresponding mode button and the machine will start sterilizing, while the colorful light indicating the position of the water catalyst generator will flash, the indicator light of the mode on the panel is white and the rest of the lights go out.
5. If you change sterilization modes, sterilization time will be recounted.
6. When disinfection is completed, the indicator light and colorful light will be off, the buzzer will ring five times and the machine will enter standby state again.

PRODUCT SPECIFICATION

Product specification	Correlation parameters
Power adapter	Input : AC230V~60Hz Output : DC24V/4A
Power	90W
Standby power	< 2W
Electrode	Size : $\Phi 56$
Body material	Food-grade ABS
Electrolysis time	Fruits and vegetables: 15 minutes Fish: 18 minutes Baby items: 30 minutes
Standby indicator	Power button light is on
Working Indication	Mode button and colorful lights are on
Product size	279x279x351mm
Volume	12L
Net weight	3.2KG

MAINTENANCE

Daily cleaning

Clean the product with a soft, wet cloth. Empty the tub and fill half of the tub with water. Shake it for a few times, pour it out and cover the lid to prevent dust from getting into the product.

Cleaning regularly

After using the machine for a long time, use citric acid to wash off stubborn dirt. The method is as follows:

Pour 10% citric acid solution (50g citric acid dissolved in 450ml warm water) into the tub for cleaning purposes, wait for about 7-8 hours, and then rinse the tub with water. This way precipitates on the electrodes can be removed.

Step 1



50g citric acid

Step 2




Stirring and diluting

Citric acid


40-60°C warm water

Step 3

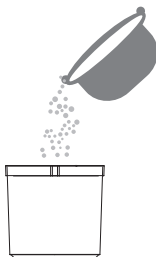

Pour citric acid solution into the tub

Step 4

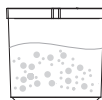

Soak the tub for 7-8 hours, then rinse it with water


Odor treatment

The host water catalyst generator may have odors after being used for a long time. In order to solve this problem, pour 60 °C water into the tub, wait for 5 minutes, and then pour the water out.


TROUBLESHOOTING

Problem	Possible reasons and solutions
Power off	The power socket may not be working. Switch to a socket that works to charge your machine.
	The power adapter is not plugged in. Reconnect the power adapter.
	If the problem still persists, please contact Condura's customer service hotline.
LED light is not working	The power adapter is not plugged in. Reconnect the adapter.
	The LED light may be broken. If bubbles are being produced during electrolysis but the LED light does not light up, the light may be damaged and needs repair.
No bubbles are being produced	The tub is not placed properly. Reinstall the tub.
	Dirt may have accumulated in the tub. Clean the tub as instructed.
	If the problem still persists, please contact Condura's customer service hotline.


ITEMS IN THE BOX

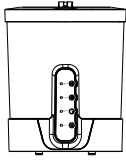

Multifunctional sterilizer x1

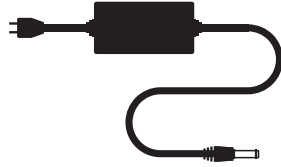

Power adapter x1

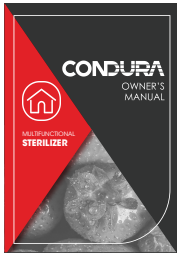

User manual x1

Customer Care

We are committed to serve.

QUESTIONS ABOUT YOUR CONDURA MULTIFUNCTIONAL STERILIZER

Please feel free to contact any of our customer care hotline*:

CUSTOMER SERVICE DEPARTMENT

GMA & LUZON Area

Address: 308 Sen. Gil Puyat Avenue, Makati City

Trunk Line: (02) 8 863 5555

TOLL FREE: 1800 10 888 8888

Mobile Number: +63 917 536 3030 (Globe) "SMS Only"
+63 947 996 2415 (Smart) "SMS Only"

Covered Region/Areas: National Capital Region (NCR), Ilocos Region (Region 1), Cordillera Administrative Region (CAR), Central Luzon (Region III), CALABARZON (Region IV-A), MIMAROPA except Romblon (Region IV-B), Bicol Region except Masbate (Region V)

Email Address: customercare@condura.com

CEBU Regional Office

Address: Dr. A Esperanza Building, A.C Cortes Ave. Mandaue City

Telefax No: 032 328 1416

Mobile Number: +63 947 996 2416
+63 921 222 0942

TOLL FREE: 1800 10 888 8888

Covered Region/Area: Masbate, Central Visayas (Region VII), Eastern Visayas (Region VIII)

ILOILO Regional Office

Address: 109 Yulo Street, Brgy. Yulo-Arroyo, Iloilo City, Iloilo

Telefax No: 032 36 1121

Mobile Number: +63 947 996 2417
+63 999 925 5736

TOLL FREE: 1800 10 888 8888

Covered Region/Area: Romblon, Western Visayas (Region VI)

CAGAYAN DE ORO Regional Office

Address: No. 102 CKY Center, Capistrano-Chavez Street, CDO City

Telefax No: 08822 721 905

Mobile Number: +63 947 996 2419
+63 939 253 5011

TOLL FREE: 1800 10 888 8888

Covered Region/Area: Zamboanga Peninsula (Region IX), Northern Mindanao (Region X), Autonomous Region in Muslim Mindanao (ARMM) except Maguindanao, Agusan Del Norte, Surigao del Norte

DAVAO Regional Office

Address: 1C, Nand-Saling Building, Sobrecarey Street, Obrero, Davao City

Telefax No: 082 224 5040

Mobile Number: +63 947 996 2418
+63 922 294 1478

TOLL FREE: 1800 10 888 8888

Covered Region/Area: Davao Region (Region XI), SOCCSKSARGEN (Region XIII), Agusan Del Sur, Surigao del Sur, Maguindanao

All contact information detailed above may change without prior notice.



CONCEPCION DURABLES INCORPORATED

CUSTOMER SERVICE DEPARTMENT

308 Sen. Gil Puyat Avenue, Makati City

Trunk Line: (02) 8 863 5555


TOLL FREE: 1800 10 888 8888

**Mobile Nos.: 0917 536 3030 (Globe)
0947 996 2415 (Smart)**

PO BOX 211 COMMERCIAL CENTER

MAKATI CITY

**BUSINESS REPLY!
Permit No. 2416A!
NO STAMP NEEDED**



CONDURA

PRODUCT WARRANTY CERTIFICATE

IMPORTANT: PLEASE READ CAREFULLY

Concepcion Durables, Inc. ("CDI") warrants to the purchaser that this CONDURA MULTIFUNCTIONAL STERILIZER will be free from defects in material and workmanship, and agrees to repair or replace any defective part or unit with a new or equivalent part or unit through any of its Authorized Service Centers if such defect is found to be manufacturer's error and in accordance with the terms of this warranty, subject to the following conditions:

1. COVERAGE OF WARRANTY

Applicable for Condura Multifunctional Sterilizer

2. WARRANTY PERIOD (from the date of original purchase)

System Parts and labor.....1 Year

CDI warrants this Multifunctional Sterilizer to the original purchaser/user to be free from defects in materials and workmanship under normal use.

CDI shall, at no cost to the original purchaser/user, repair or replace the unit or any of its parts that is found by CDI to be actually defective within the Warranty Period, with original or equivalent unit or parts, subject to the conditions and exclusions provided below.

3. LIMITATIONS

This warranty is not transferable, valid only in the Philippines. This warranty shall be void if the unit is:

- Improperly installed or mounted, or subjected to misuse, abuse, neglect, accident, alteration or abnormal voltage conditions
- Plugged into any device other than a suitable power supply outlet
- Serviced, opened, dismantled, disassembled, or reassembled by anyone other than a CDI accredited service center
- Damaged in transport or subjected to rough handling
- Damaged due to rodent, pest, or related infestation
- Damaged due to commercial use (stores, restaurants, other businesses, and non-household application)
- Damaged due to accidents, flood, fire, etc.

This warranty does not cover breakable parts and accessories, and any damages due to wear and tear.

The above warranties are given by CDI in lieu of any other warranties, express or implied. CDI and its vendors disclaim any implied warranty of merchantability or fitness for a particular purpose or any similar standard imposed by applicable legislation. CDI's responsibility to repair, replace or offer a refund for defective units, parts and related items is the sole and exclusive remedy provided for breach of these warranties.

MODEL NO. SERIAL NO.

NOTE: Keep this warranty card together with your Original Sales Invoice /Official Receipt as proof of purchase. If the date of purchase cannot be proven, warranty shall be based on CDI's Invoice to Dealer.



Fill out this warranty card completely and mail within 15 days from date of purchase. This will activate your warranty.



MODEL NO. SERIAL NO.
DEALER (Please indicate branch)
DATE OF PURCHASE **DEALER INVOICE NO.**
CUSTOMER NAME **EMAIL ADDRESS**
ADDRESS
TELEPHONE NO. MOBILE NO.



www.CONDURA.com