

CONDURA

NEGOSYO INVERTER CHEST FREEZER PRO

CCF96Ri, CCF150Ri, CCF200Ri,
CCF250Ri, CCF310Ri, CCF420Ri &
CCF500Ri



CONDURA
KAYANG-KAYA!



CONDURA HOME

**Products that let you experience the Condura brand offering, providing solutions to your home needs according to your chosen lifestyle.
(No Frost Prima, Maxima and Ultima Refrigerators, Personal Refrigerators)**



CONDURA HOME & BUSINESS

**Products that are made durable and efficient for business use, which are even better for home use.
(Negosyo Inverter PRO, Negosyo Inverter Style, Negosyo Style, No Frost Optima)**




CONDURA COMMERCIAL

**Products that come with Negosyo Features, so you can go about your business without worrying about performance and service.
(Upright Freezers, Chest Freezers, Beverage Coolers)**

Table of Contents

①	Parts and Features	2-3
②	Installation Guide (Handle)	4
③	Start Up	5
④	How to Control Temperature based on Freezer Contents	6
⑤	Defrosting and Cleaning	7
⑥	Safety	8
⑦	Energy Saving Tips	9
⑧	Storing Fresh Foods	10
⑨	Troubleshooting Guide	13



PARTS AND FEATURES

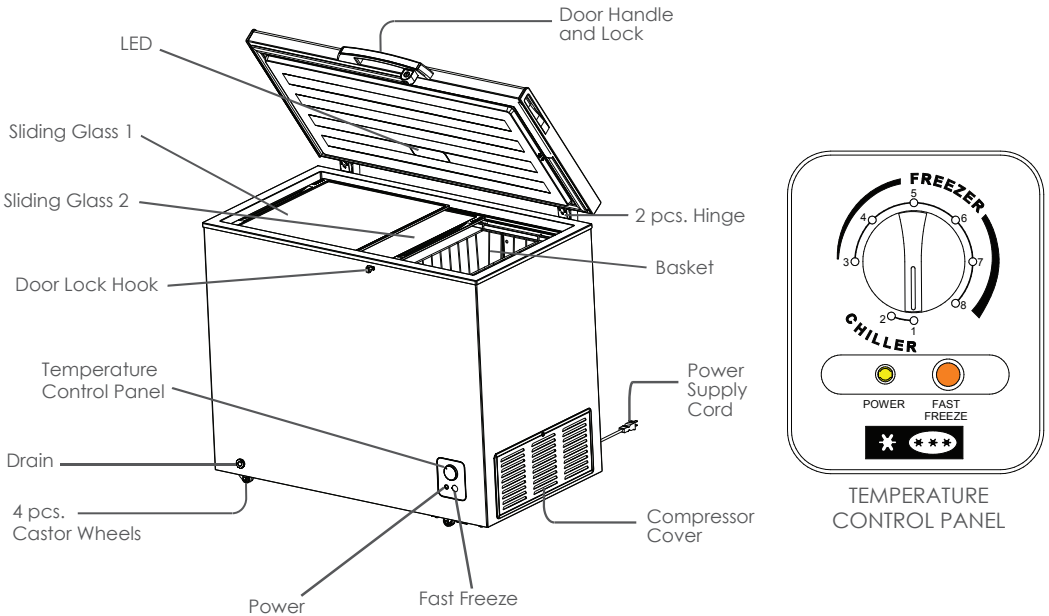

MODEL	CCF150Ri	CCF200Ri	CCF250Ri	CCF310Ri
Gross Volume (L)/(cu.ft.)	141/ 5.0	195/ 7.0	248/ 8.8	300/ 10.6
Net Volume (L)/(cu.ft.)	134/ 4.7	186/ 6.6	236/ 8.3	286/ 10.1
Power Consumption (kW/24h)	0.60	0.71	0.84	0.85
Voltage (V)/ Frequency (Hz)	230/60	230/60	230/60	230/60
Handle w/Lock and Key	Yes	Yes	Yes	Yes
Basket (pc)	1	1	1	1
Sliding Glass	Yes	Yes	Yes	Yes
LED Assembly (W)	2W	2W	2W	2W
Unit Dimension(mm) WxDxH	697x560x842	891x557x842	1002x597x842	1114x630x847
Packed Dimension(mm) WxDxH	726x575x888	920x575x888	1031x623x888	1145x647x880
Gross Weight (kg)	33	38	41	46
Net Weight (kg)	30	34	36	40
Basket Load Capacity - Max. (kg)	8	8	8	10

Note: Product Specification and Features are subject to change without prior notice.

PARTS AND FEATURES

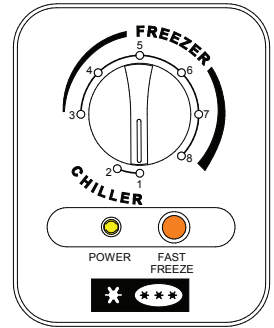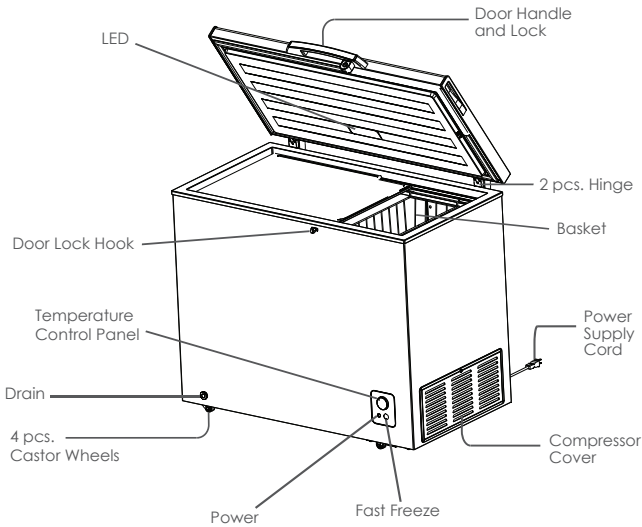

TEMPERATURE CONTROL PANEL

MODEL	CCF96Ri	CCF151Ri	CCF201Ri	CCF420Ri	CCF500Ri
Gross Volume (L) / (cu.ft.)	96 / 3.4	144 / 5.1	199 / 7.0	420 / 15	500 / 18.0
Net Volume (L) / (cu.ft.)	96 / 3.4	144 / 5.1	199 / 7.0	420 / 15	500 / 18.0
Power Consumption (kwh/24h)	0.60	0.69	0.79	1.10	1.50
Voltage (V) / Frequency (Hz)	230 / 60	230 / 60	230 / 60	230 / 60	230 / 60
Handle w/ Lock and Key	Yes	Yes	Yes	Yes	Yes
Basket (pc)	1	1	1	1	2
Sliding Glass	None	None	None	None	None
LED Assembly (W)	2W	2W	2W	2W	2W
Unit Dimension (mm) WxDxH	546 x 479 x 854	625 x 559 x 854	802 x 559 x 854	1448 x 717 x 852	1646x717x842
Packed Dimension (mm) WxDxH	575 x 495 x 890	655 x 575 x 890	833 x 575 x 890	1483 x 742 x 890	1690x753x890
Gross Weight (kg)	24	29	32	64	71
Net Weight (kg)	22	27	30	58	62
Basket Load Capacity - Max (kg)	8	8	8	18	15


Note: Product Specification and Features are subject to change without prior notice.

INSTALLATION GUIDE (HANDLE)

Your chest freezer is delivered with a detached door handle.

Please be guided by the following information before installing the door handle:


a. Required tools:

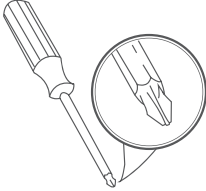

Cross Head Screwdriver


b. Handle kit components:

Item No.	Description	Qty.
1	Handle Grip	1
2	Handle Cover	1
3	Mounting Screws	6
4	Door Lock Hook	1


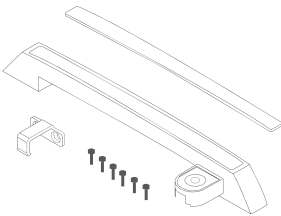


To Install, please follow the procedures.


1. Install door lock hook to the cabinet using two screws provided.

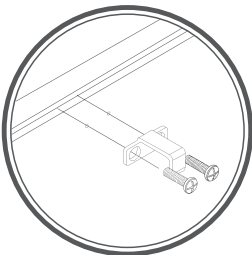


2. Install handle grip to the chest freezer using the four screws provided.

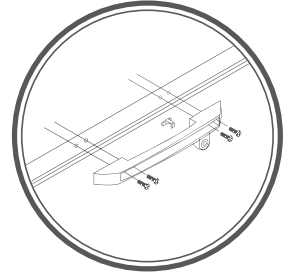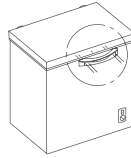

3. Attach the handle cover to the handle grip, starting off with the left side, then the right side.

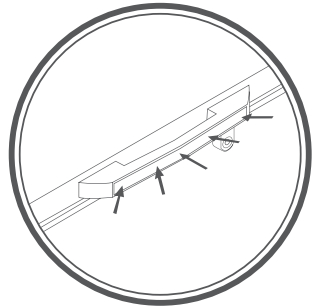

4. Push the face of the handle cover to snap it to the handle grip.

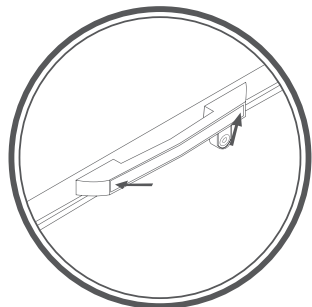


START-UP


1. Place the chest freezer on a firm and flat surface, away from direct sunlight and heat source (i.e. oven, stove).



2. Leave at least 4 inches of space between freezer and wall to ensure proper air circulation.

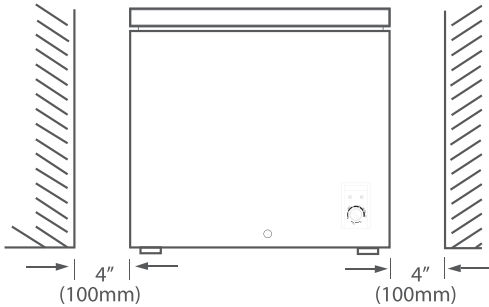


3. Allow the compressor oil to settle for 6 hours before plugging the unit.
4. Plug the freezer directly to a 230-Volt wall outlet.
Do not use extension cord.

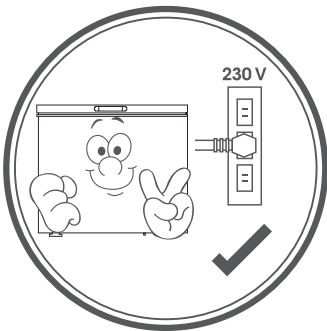

5. Indicator Light means the following:
Power Light- Unit is plugged in
Orange Light- Fast Freeze

6. Set the temperature control knob at MAX or coldest and allow the chest freezer to cool for 4 hours before loading food.

If use as Chiller: Setting #2
If use as Freezer: Setting #5

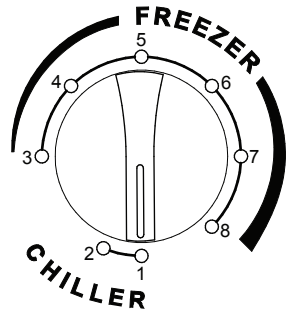

Caution:

Do not touch the freezer's inner wall with wet hands to avoid frost bite.


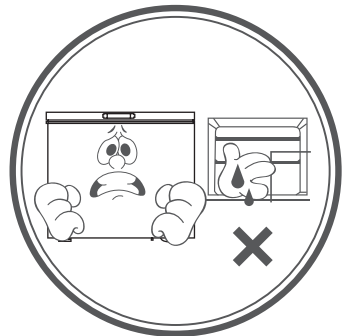


Image may vary from actual unit

HOW TO CONTROL TEMPERATURE BASED ON FREEZER CONTENTS.

The temperature in the freezer is set using the control knob. The numbers on the control knob do not represent actual temperature.

Your Negosyo Inverter Chest Freezer is designed to operate a chilling, freezing and fast freezing function.

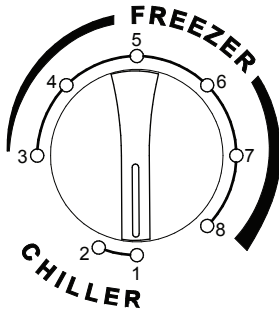


CHILL Setting

Number 1 to 2 setting

For storing bottled drinks, fizzy drinks, sealed cans or can containing carbonated drinks and other chilling food and beverage items.


Note: Do not use FAST FREEZE switch

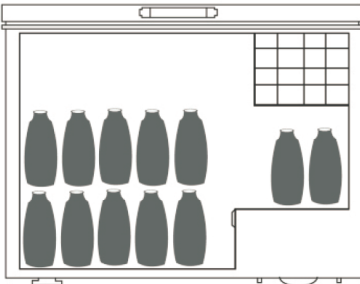

FREEZE Setting


a. MIN Setting at number 3 to 4

For Storing MINIMAL amount of food.

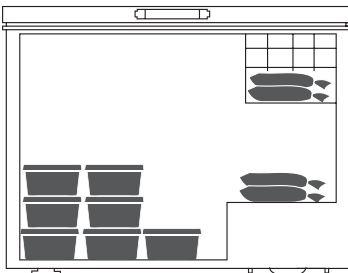


b. MID Setting at number 5 to 6

For Storing MODERATE amount of food.

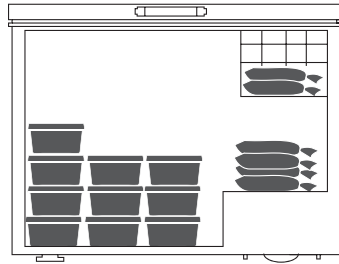

c. MAX Setting at number 7 to 8

For Storing LARGE amount of food and START UP.

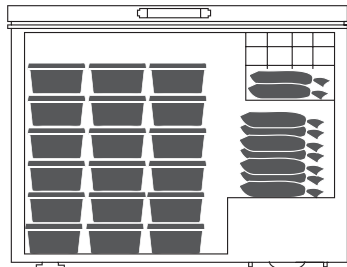

FAST FREEZE SWITCH

Your chest freezer is equipped with fast freeze mode. Use this when starting up or ever time you need the temperature inside the freezer compartment to cool rapidly.

To turn ON this mode, simply press the "FAST FREEZE" (orange switch) upwards. The light will turn ON and the freezer will operate in full blast. To turn OFF this mode, press the "FAST FREEZE" (orange switch) downwards.

Note: Advisable use of Fast Freeze will be 10-12hours only.

The principle of operation is compressor not controlled by thermostat but keeps continuous running so that the food in the cabinet will be fast frozen.

NOTE: Use fast freeze switch on setting number 3-8 only.

WARNING:

At Freeze/Fast Freeze Setting. DO NOT store bottled drinks, sealed cans or any carbonated drinks into the freezer as they may burst.


DEFROSTING AND CLEANING

Defrosting is necessary when the ice formation is already $\frac{1}{4}$ of an inch (6mm) thick.

TIPS:

- Thick ice formation act as insulation that reduces the cooling efficiency of your unit. Defrost regularly.
- Before defrosting, set the temperature control knob at MAX or coldest for 7-8 hours to ensure that the food is at its coldest when you remove it.


1. Unplug the CHEST FREEZER power cord.

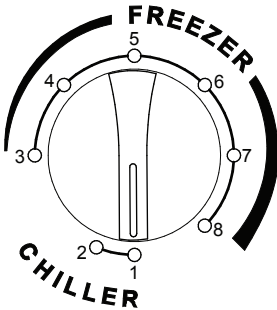

Remove all contents, including glass doors and basket, and leave the door open until ice has completely melted.

Use the ice scraper provided to easily remove ice blocks

2. REMOVE the drain cover found inside your chest freezer.

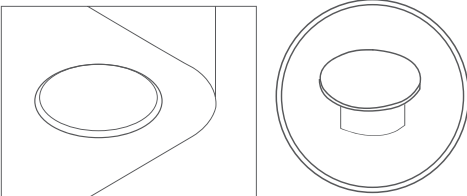


Prepare a pan to collect defrost water before activating the drain plug by turning it clockwise.



Once all defrost water is drained, return the drain cover and turn the drain plug counter clockwise until the arrow is pointing up.

3. CLEAN the interior surface, gasket, inner and outer walls using a clean, damp cloth.

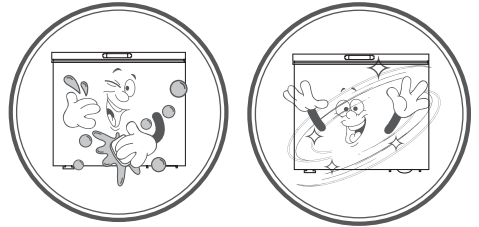

Plug your chest freezer directly to a 230V wall outlet, set the temperature control knob to MAX, and allow to run for at least one hour.

Return all contents and adjust the temperature control knob to the appropriate setting based on freezer contents.

Caution or Warning:

Do not use mechanical devices or other means to accelerate the defrosting process.

Image may vary from actual unit


SAFETY

A. POWER CORD

Call Customer Care Hotline or any authorized service center immediately for replacement or repair of damaged power cord.

Ensure that hands and rug are dry when touching or cleaning the power plug.

When unplugging, always grip the power plug firmly and do not pull or jerk the power cord.

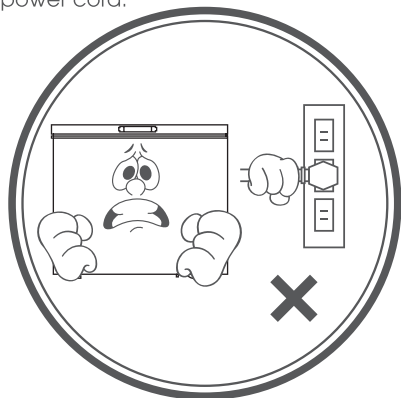

Do not plug freezer in loose sockets. Ensure that the power cord is not bent excessively or pressed down by a heavy object.

WARNING: Do not use extension cord.


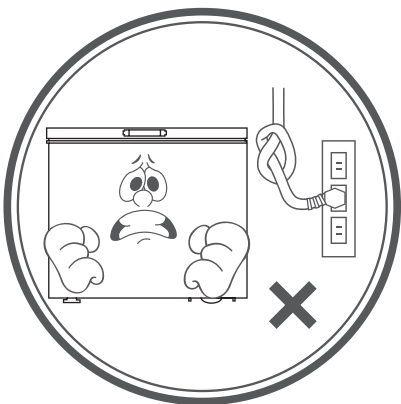


Image may vary from Actual Unit

B. STORAGE

Storing hazardous chemicals, such as gasoline and benzenes, can cause an explosion.

At Freeze/Fast Freeze Setting, DO NOT store bottled drinks, fizzy drinks, or any carbonated drinks into the freezer as they may burst.

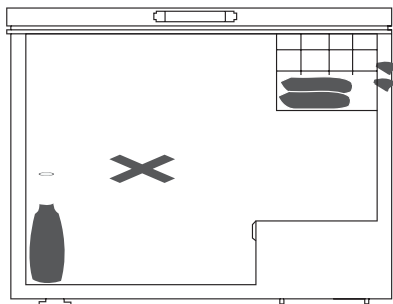

C. HANDLING

Call Customer Care Hotline or any authorized service center immediately if you encounter any problem. Do not attempt to disassemble or repair the freezer.

Avoid water contact near the temperature control knob to prevent shock hazards.

D. DISPOSAL

Please contact local authorities for the proper disposal of your freezer. The gas in the insulation material requires special disposal procedures.

CAUTION or WARNING:


1. Do not let the children and lack of experience and knowledge to play or operate the appliance.
2. Do not use sharp objects or tools that may cause damage to the refrigerant circuit.
3. Do not use electrical appliances inside the food storage compartment of the appliance.

Warning: The LED Light must not be replaced by user! If the LED Light is damaged, it is highly recommended to have our authorized service personnel to do the replacement for you.


Call our customer care hotline for more info

ENERGY SAVING TIPS


1. Cool down hot food items first before placing inside the freezer.

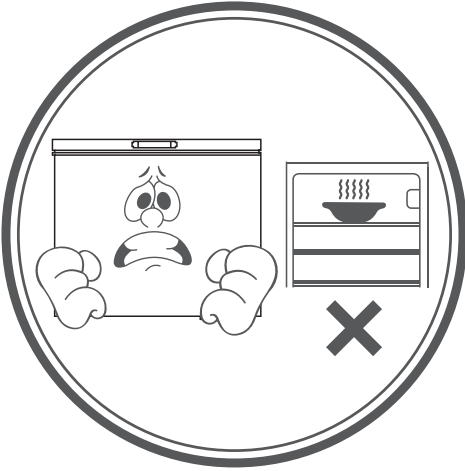

3. Always close the sliding glass.

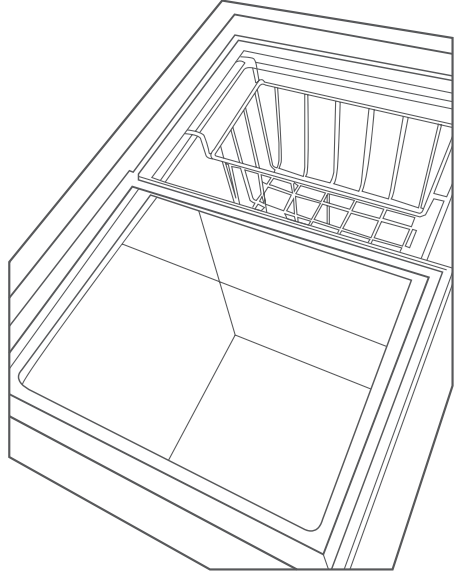

2. Avoid keeping the freezer door open for a long time.

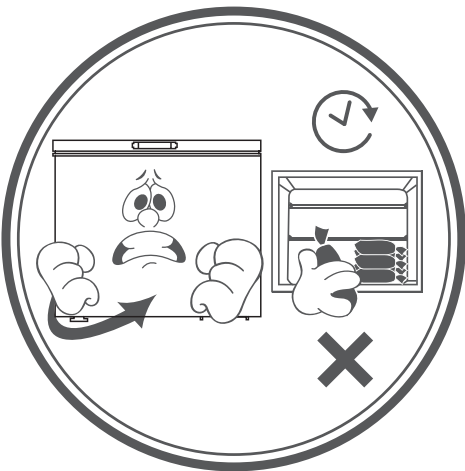


4. Properly adjust the temperature settings according to freezer load.

5. Defrost and clean the freezer regularly.


****Image may vary from Actual Unit****

STORING FRESH FOODS

1. Place fresh food to be frozen near the side walls to ensure fast freezing and away from already frozen food, if possible.

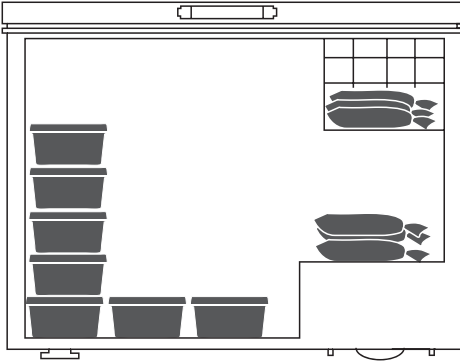

3. Avoid placing fresh foods beside already frozen items.

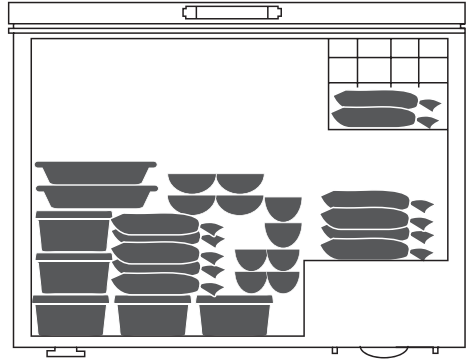

2. Never exceed maximum capacity illustrated below. Do not freeze large quantities of food at any one time.

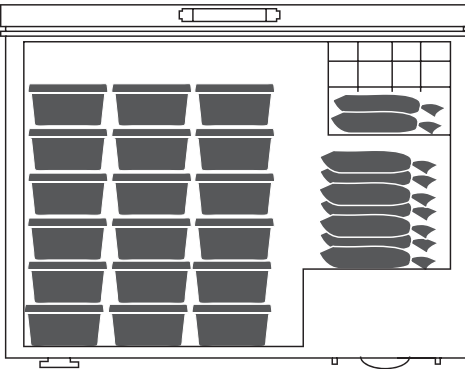


Image may vary from Actual Unit

Fill-up this warranty card completely and mail within 15 days from date of purchase. This will activate your two (2) years warranty that is VALID FOR NEGOSYO USE. Only from Condura!

CONDURA

MODEL NO.: _____ SERIAL NO.: _____
 DEALER: _____ BRANCH: _____
 DATE OF PURCHASE: _____ DEALER INVOICE NO.: _____
 CUSTOMER NAME: _____ EMAIL ADDRESS: _____
 ADDRESS: _____
 TELEPHONE NO.: _____ MOBILE NO.: _____

I consent to the collection, processing and use by Concepcion Durables, Inc. (CDI) of the data below for the purposes identified in its Data Privacy Notice published in its website (www.condura.com), which is deemed incorporated into this Warranty Card.



CONDURA

PRODUCT WARRANTY CERTIFICATE

IMPORTANT: PLEASE READ CAREFULLY

Concepcion Durables, Inc. (CDI) warrants the purchaser, that this CONDURA NEGOSYO CHEST FREEZER will be free from defective material and workmanship, and agrees to repair, or at its discretion, replace any defective material with a new or equivalent part, through any of its Authorized Service Centers, only if found to be manufacturer's defect and in accordance with the terms of this warranty, subject to the following conditions:

1. WARRANTY PERIOD (from the date of original purchase)

CONDURA	WARRANTY
1 year	Fan Motor (CCF500Ri) and Inverter Board (All Cfi models)
2 years	SYSTEM PARTS & LABOR (Refrigerant and Filter) (All Cfi models)
5 years	COMPRESSOR (Motor only, Does NOT include System Parts & Labor)
3 months	PLASTIC PARTS (Rubber Gasket, LED Light) (All Cfi models)
NO Warranty	Sliding Glass (CCF150Ri, CCF200Ri, CCF250Ri & CCF310Ri) Power Cord (All Cfi models)

There will be corresponding charges for labor and replacement parts after the warranty period.

2. COVERAGE OF WARRANTY

The CONDURA warranty is also applied to Chest Freezer used for business and commercial purposes.

3. LIMITATIONS

This warranty is not transferable, valid only in the Philippines, and does not apply to damage(s) due to fire, improper use or abuse (punctured), force majeure (typhoon, flood, lightning, earthquake, etc.), use with voltages beyond the allowable range of 187V to 254V, or failure to follow operating instructions, provided in the manual, if the serial number is removed or defaced, or if the unit has been tampered with, altered or in any way repaired, serviced or worked on by anyone other than a duly authorized representative or Service Center, this warranty is considered null and void. Concepcion Durables, Inc. (CDI) offers this warranty as the only remedy available to the original purchaser for any defect, that may arise within the warranty period. Correction of defects shall be considered as complete fulfillment of liabilities and responsibilities of CDI to the original purchaser. In no event shall CDI be held liable for any damage or consequence that may arise as a result of using this CONDURA product.

MODEL NUMBER: _____ SERIAL NUMBER: _____


NOTE: Keep this warranty card together with your Original Sales Invoice / Official Receipt as proof of purchase. If the date of purchase cannot be proven, warranty shall be based on CDI's invoice to Dealer.

**CONCEPCION DURABLES INCORPORATED
CUSTOMER SERVICE DEPARTMENT**

Address: 308 Sen. Gil Puyat Avenue, Makati City
Trunk Line: 02 8 863 5555
TOLL FREE: 1800 10 888 8888
Mobile Nos.: 0917 536 3030 (Globe)
0947 996 2415 (Smart)

**PO BOX 211 COMMERCIAL CENTER
MAKATI CITY**

**BUSINESS REPLY
Permit No. 2416A
NO STAMP NEEDED**

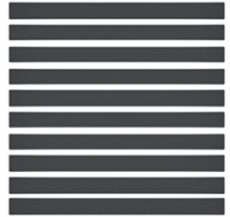

CONCEPCION DURABLES INCORPORATED

CUSTOMER SERVICE DEPARTMENT

GMA & LUZON Area

Address: 308 Sen. Gil Puyat Avenue, Makati City
Trunk Line: 028 863 5555
TOLL FREE: 1800 10 888 8888
Mobile Number: +63 917 536 3030 (Globe) "SMS Only"
+63 947 996 2415 (Smart) "SMS Only"

Covered Region/Areas: National Capital Region (NCR), Ilocos Region (Region I), Cordillera Administrative Region (CAR), Central Luzon (Region III), CALABARZON (Region IV-A), MIMAROPA except Romblon (Region IV-B), Bicol Region except Masbate (Region V)
Email Address: customercare@condura.com

CEBU Regional Office

Address: Dr. A Esperanza Building, A.C Cortes Ave. Mandaue City
Telefax No: 032 328 1416 / 032 347 3380
Mobile Number: +63 947 996 2416
+63 921 222 0942
TOLL FREE: 1800 10 888 8888

Covered Region/Area: Masbate, Central Visayas (Region VII), Eastern Visayas (Region VIII)

ILOILO Regional Office

Address: 109 Yulo Street, Brgy. Yulo-Arroyo, Iloilo City, Iloilo
Telefax No: 033 336 1121
Mobile Number: +63 947 996 2417
+63 999 925 5736
TOLL FREE: 1800 10 888 8888

Covered Region/Area: Romblon, Western Visayas (Region VI)

CAGAYAN DE ORO Regional Office

Address: No. 102 CKY Center, Capistrano-Chavez Street, CDO City
Telefax No: 088 881 0615
Mobile Number: +63 947 996 2419
+63 939 253 5011
TOLL FREE: 1800 10 888 8888

Covered Region/Area: Zamboanga Peninsula (Region IX), Northern Mindanao (Region X), Autonomous Region in Muslim Mindanao (ARMM) except Maguindanao, Agusan del Norte, Surigao del Norte

DAVAO Regional Office

Address: 1C, Nand-Saling Building, Sobrecarey Street, Obrero, Davao City
Telefax No: 082 291 7276
Mobile Number: +63 947 996 2418
+63 922 294 1478
TOLL FREE: 1800 10 888 8888

Covered Region/Area: Davao Region (Region XI), SOCCSKSARGEN (Region XII), Agusan del Sur, Surigao del Sur, Maguindanao

All contact information detailed above may change without prior notice.

PROBLEM SOLVING/TROUBLE SHOOTING

PROBLEM ENCOUNTERED	CHECK IF
1. When freezer would not turn ON:	1. The power cord is properly plugged-in. 2. The temperature control knob is in "OFF" position.
2. When freezer is not cooling:	1. The temperature control knob is properly set. 2. The freezer door is tightly shut. 3. The lamp turns off while the freezer door is being closed.
3. When the freezer emits foul odor:	1. There is spoiled food or drink inside the freezer. 2. The freezer is completely clean.
4. When there is sweating in the exterior freezer cabinet during cold weather:	1. The temperature control knob is set according to freezer load. It is recommended that you lower the temperature setting during cold weather. 2. The freezer door is tightly shut.
5. When freezer makes "unusual noise" like sizzling, ticking, or humming:	<p>Please note that these may be normal sounds that indicate that your ref is working properly:</p> <p>"Sizzling" – This indicates the refrigerant is passing through the freezer compartment. "Ticking" – This indicates that the thermostat control is turning on and off "Humming" – This is the natural sound of the motor when it is working.</p>

If problem still occurs after checking all items above, please call our "Customer Care Hotlines":
 Trunkline : **02 8 863 5555**
 TOLL FREE : **1800 10 888 8888**
 Globe: +63 917 536 3030
 Smart: +63 947 996 2415

- *Numbers are subject to change without prior notice**
Please prepare the following information to be relayed to the Customer Care Representative who will take your call:
- Customer ID No (if already previously assigned one)
 - Customer Name
 - Address (House No., Block / Lot, Street, Subdivision, Barangay, City and Nearest Landmarks)
 - Model & Serial No of your refrigerator (found on the sticker inside ref)
 - Dealer Branch (where the unit was purchased)
 - Date of purchase (according to sales invoice / receipt)
 - Complaint or problem encounter



Scan QR code for service needs

You may also scan the provided QR code to book a service

CONDURA
KAYANG-KAYA!

www.condura.com